 




KYOCERA

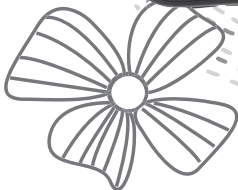

Milano C5121

user guide



Milano C5121 User Guide

This manual is based on the production version of the Kyocera C5121 device. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice.

The Kyocera Communications Inc. ("KCI") products described in this manual may include copyrighted KCI and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for KCI and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the KCI products may not be modified, reverse engineered, distributed or reproduced in any manner not permitted by law.

Furthermore, the purchase of the KCI products shall not be deemed to grant—either directly or by implication, estoppel, or otherwise—any license under the copyrights, patents, or patent applications of KCI or any third party software provider, except for the normal, non-exclusive royalty-free license to use that arises by operation of law in the sale of a product.

Kyocera is a registered trademark of Kyocera Corporation.

Bluetooth trademarks are owned by Bluetooth SIG, Inc. and used by Kyocera Communications Inc. under license.

microSDHC Logo is a trademark. Android, Android Market, Google Maps, Gmail, Google Talk are trademarks of Google, Inc. WnnIME OMRON SOFTWARE Co., Ltd. 2009-2011 All Rights Reserved. The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance. The Wi-Fi Alliance Member Logo is a logo of the Wi-Fi Alliance.

All other trademarks are the property of their respective owners.

Copyright © 2011 Kyocera Corporation. All rights reserved.

Ringer Tones Copyright © 2000-2011 Kyocera Corporation.

82-A6267-1EN, Rev. 001

FCC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 15 mm separation distance including the antenna and the user's body.

THIS MODEL DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless device is a radio transmitter and receiver. It is designed and manufactured to not exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.*

Tests for SAR are conducted using standard operating positions specified by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a device model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

Body-worn measurements differ among device models, depending upon availability of accessories and FCC requirements. While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest reported SAR values of this device are:

WLAN mode (Part 15):

Head: 0.14 W/kg; Body-worn: 0.06 W/kg

Cellular CDMA mode (Part 22):

Head: 0.46 W/kg; Body-worn: 0.82 W/kg

PCS mode (Part 24):

Head: 1.42 W/kg; Body-worn: 0.52 W/kg

AWS mode (Part 27):

Head: 1.38 W/kg; Body-worn: 0.56 W/kg

SAR information on this model device is on file with the FCC and can be found under the Display Grant section

www.fcc.gov/oet/ea/fccid after searching on the FCC ID: OVFC51213CD.

Additional information on SAR can be found on the Cellular Telecommunications and Internet Association (CTIA) web-site at www.ctia.org.

* In the United States and Canada, the SAR limit for mobile devices used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue.

Bluetooth® Certification

For information about C5121 Bluetooth Certification, visit the Bluetooth Qualification Program Web site at www.bluetooth.org/tpp/listings.cfm.

Caution

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

Optimize your Device's Performance

Use the instructions in this guide to learn how to optimize the performance and life of your device and battery.

Air Bags

If you have an air bag, DO NOT place installed or portable device equipment or other objects over the air bag or in the air bag deployment area. If equipment is not properly installed, you and your passengers risk serious injury.

Medical Devices

Pacemakers—Warning to pacemaker wearers: Wireless devices, when in the 'on' position, have been shown to interfere with pacemakers. The device should be kept at least six (6) inches away from the pacemaker to reduce risk.

The Health Industry Manufacturers Association and the wireless technology research community recommend that you follow these guidelines to minimize the potential for interference.

- Always keep the device at least six inches (15 centimeters) away from your pacemaker when the device is turned on.
- Do not carry your device near your heart.
- Use the ear opposite the pacemaker.
- If you have any reason to suspect that interference is taking place, turn off your device immediately.

Hearing aids—Some digital wireless devices may interfere with hearing aids. In the event of such interference, you may want to call the customer service line to discuss alternatives.

Other medical devices—If you use any other personal medical device, consult the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

In health care facilities—Turn your device off in health care facilities when instructed. Hospitals and health care facilities may be using equipment that is sensitive to external RF energy.

Potentially unsafe areas

Posted facilities—Turn your device off in any facility when posted notices require you to do so.

Aircraft—FCC regulations prohibit using your device on a plane that is in the air. Turn your device off or switch it to Airplane Mode before boarding aircraft.

Vehicles—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy.

Blasting areas—Turn off your device where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres—Turn off your device when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

Use with Care

Use only in normal position (to ear). Avoid dropping, hitting, bending, or sitting on the device.

Avoid Magnetic Environments

Keep the device away from magnets which can cause improper functioning of the device.

Keep Your Device Dry

Keep the device dry. Damage can result if the device gets wet. Water damage is not covered under warranty.

Resetting the Device

If the screen seems frozen and the keypad does not respond to key presses, reset the device by completing the following steps:

1. Remove the battery cover.
2. Remove and replace the battery.

If the problem persists, return the device to the dealer for service.

Accessories

Kyocera makes no representation or warranty with regard to accessories other than those originally packaged with the device. Please check with the manufacturer of any third party accessories as to compatibility and safety.

Radio Frequency (RF) Energy

Your device is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Your service provider's network controls the power of the RF signal. This power level can range from 0.006 to 0.6 watts.

In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

- ANSI C95.1 (American National Standards Institute, 1992)
- NCRP Report 86 (National Council on Radiation Protection and Measurements, 1986)

- ICNIRP (International Commission on Non-Ionizing Radiation Protection, 1996)

Your device complies with the standards set by these reports and the FCC guidelines.

E911 Mandates

Where service is available, this device complies with the Phase I and Phase II E911 Mandates issued by the FCC.

Hearing Aid Compatibility (HAC) with Mobile Phones

Some mobile phones and hearing devices (hearing aids and cochlear implants), when used together, result in buzzing, humming, or whining noises detected by the user.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated.

Phones that are rated have the rating on their box or a label on the box. The ratings are not guarantees and results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated device successfully. Trying out the device with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings—Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings—Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you choose the proper rating for your mobile device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

For more information about hearing aid compatibility, visit the FCC's Consumer & Governmental Affairs Bureau Web site at www.fcc.gov/cgb/dro.

Kyocera Communications Inc.
www.kyocera-wireless.com

Table of Contents

1	Get Started	9	6	Gallery	45
	Device Battery	9		View Gallery	45
	Memory Card	11		Take a Picture	45
	Device Overview	13		File List Options	45
	Main Menu	15	7	Music	47
	Google Account	17		Play a Song	47
	Notification and Status Icons	18		View Artists	47
	Common Android Icons	19		View Albums	47
	Guide Conventions	21		View Playlists	47
2	Home Screen	22		Load a Song	48
	Home Screen Overview	22		Music Library Options	48
	View Screen Panels	23		Song Options	50
	Device Key Options	23	8	Camera	51
	Home Screen Options	24		Camera Tips	51
3	Phone	27		Take a Picture	51
	Make Phone Calls	27		Record a Video	51
	Answer Phone Calls	28		Camera Options	51
	Voicemail	29		Camcorder Options	53
	Call log	30	9	Settings	54
4	Contacts	32		Settings Menu	54
	View Contacts List	32		Wireless & networks	56
	Create a Contact	32		Call settings	59
	Contact List Options	32		Sound	61
	Contact Detail Options	34		Display	62
5	Messaging	36		Location & security	62
	View All Message Threads	36		PC connection	64
	Create a Message	36		Applications	64
	Respond to Message Notifications	37		Accounts & sync	65
	Compose Message Options	37		Privacy	66
	Text Entry Options	38		Storage	66
	Thread List Options	40		Language & keyboard	66
	View Thread Options	40		Voice input & output	70
	Message Settings	43		Accessibility	71

	Date & time	71
	About phone	72
10	Other Android Applications	73
	Launch Books	73
	Browser	73
	Use Calculator	73
	Calendar	74
	Clock	74
	Market	75
	Gmail	75
	Set Eco Mode	76
	Email	77
	Launch Latitude	78
	Launch Places	78
	Launch Maps	79
	Launch Navigation	79
	Launch News & Weather	79
	Google Search	79
	Launch Talk	80
	Launch YouTube	80
11	Voice Dialer	81
	Launch Voice Dialer	81
	Voice Dialer Options	81
12	Get Help	82
	Phone Help	82
	Customer Support	82
	Qualified Service	82
	Consumer Limited Warranty	83
	Kyocera Communications Inc. ("Kyocera")	
	End User License Agreement	85
	Index	89

1 Get Started

Device Battery


Install Battery

1. Hold the device face down.
2. Find notch at the bottom of the device. It is rectangular and in the middle of the device. Using your thumbnail, lift the cover to remove.
3. Place the battery in the battery casing with the metal contacts facing to the top. The metal contacts of the battery must make contact with the metal contacts of the battery casing.
4. Replace the battery door by lining up the notches with the openings at the top and on each side of the battery casing.
5. Snap the cover into place.





Charge Battery

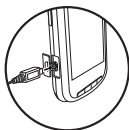1. Connect the USB cable to the Wall/USB Charger, and then connect the Micro-USB side of the cable to the Micro-USB jack on the left side of the device.
2. Plug the Wall/USB Charger into a wall outlet.



The battery icon in the upper-right corner of the screen tells you whether the device is:

- Charging (the icon is animated)
- Partially charged 
- Fully charged 

You must have at least a partial charge in the battery to make or receive calls. You can safely recharge the battery at any time, even if it has a partial charge.

Note: You can also charge your device by plugging the USB cable into your PC and the Micro-USB side into the device.

Warning: Before removing the battery, make sure the device is powered off.

Battery Safety Guidelines

- Do not disassemble or open the battery.
- Do not crush, bend, deform, puncture, or shred the battery.
- Do not attempt to insert foreign objects into the battery.
- Do not immerse the battery or expose it to water or other liquids. Even if a battery appears to dry out and operate normally, internal parts can slowly corrode and pose a safety hazard.
- Always keep the battery between 15 °C and 25 °C (59 °F and 77 °F). Do not expose the battery to extremes of temperature (heat or cold), fire, or other hazards such as a cooking surface, iron, or radiator.
- Never use any damaged battery.
- Only use the battery for its intended device.
- Only use the battery with a qualified charger. Use of an unqualified battery charger may present a risk of fire, explosion, leakage, or other hazard. If you are unsure about whether a charger is qualified, contact customer support.
- Do not short-circuit the battery or allow metallic conductive objects—such as keys, coins, or jewelry—to contact the battery’s terminals.
- Replace the battery only with another qualified battery. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazard. If you are unsure about whether a replacement battery is compatible, contact customer support.

- Promptly dispose of used batteries in accordance with local regulations and recycle if possible. Do not dispose as household waste.
- Supervise all battery usage by children.
- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, an internal short-circuit can occur and pose a safety hazard. If you suspect battery damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazard.

Battery Life Management

Because your device provides an abundance of information and applications at 3G speed, it requires a lot of power. To get the most out of your battery, consider turning off options that require a data connection for notification tasks like Bluetooth, GPS, and Wi-Fi. You can also decrease the screen brightness, screen timeout time and listen to music directly from the microSD card rather than stream over the network or via Wi-Fi.

The following can also reduce battery life between charges:

- Playing games or using the Web.
- Keeping backlighting on.
- Operating when far away from a base station or cell site.
- Using data cables or accessories.
- Operating when no service is available, or service is available intermittently.
- High earpiece and ringer volume settings.
- Repeating sound, vibration, or lighted alerts.

Memory Card

You can extend the device's memory with a MicroSD memory card.

Remove Memory Card

Warning: Be sure to follow the steps below before removing the card. Otherwise, the data on your device may be lost or damaged. Do not remove the card while downloading or saving files to the card.

1. From **Settings**, touch **Storage**.
2. Touch **Unmount SD card**. You can now safely remove the SD card.
3. Hold the device face down.
4. Find notch at the bottom of the device. It is rectangular and in the middle of the device. Using your thumbnail, lift the cover to remove.
5. Find the pull tab on the battery. Use the pull tab to lift the battery out of the battery casing.
6. Slide the SD card slot to the left to unlock it.




7. Lift the SD card slot up.



8. Slide the SD card out of the slot.



9. Lower the SD card slot into place, then slide the SD card slot to the right to lock it.

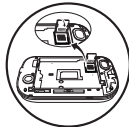

10. Place the battery in the battery casing with the metal contacts facing to the top. The metal contacts of the battery must make contact with the metal contacts of the battery casing.



11. Replace the battery door by lining up the notches with the openings at the top and on each side of the battery casing.
12. Snap the cover into place.

Install SD Card

1. Hold the device face down.
2. Find notch at the bottom of the device. It is rectangular and in the middle of the device. Using your thumbnail, lift the cover to remove.
3. Find the pull tab on the battery. Use the pull tab to lift the battery out of the battery casing.
4. Slide the SD card slot to the left to unlock it.
5. Lift the SD card slot up.
6. Make sure that the metal contacts are facing down and slide the SD card securely into slot.
7. Lower the SD card slot into place, then slide the SD card slot to the right to lock it.
8. Place the battery in the battery casing with the metal contacts facing to the top. The metal contacts of the battery must make contact with the metal contacts of the battery casing.
9. Replace the battery door by lining up the notches with the openings at the top and on each side of the battery casing.
10. Snap the cover into place.




Note: A notification appears when the card is ready for use. Do not use the card until you see the notification.

Device Overview


The device is shown here in the closed position. The external cover is a touch screen.

1. Earpiece speaker.
2. Touch screen.
3. **Home** key returns you to the home screen. Make sure to press the key below the icon.
4. **Menu** key opens the menu options for the current screen or application. Make sure to press the key below the icon.
5. **Search** key launches the **Google Search** application. Make sure to press the key below the icon.
6. **Back** key returns you to the previous screen or closes a dialog box. Make sure to press the key below the icon.

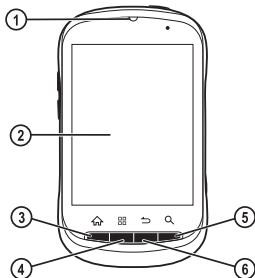

The following shows the back of the device.


1. **Power** key turns on the device. Press and hold the **Power** key to turn the device on or off. Press the **Power** key to lock the touch screen.
2. Camera lens.
3. **Camera** key launches the camera. Press and hold the **Camera** key to activate camera mode.
4. Jack for a hands-free headset (sold separately).
5. **Volume** key raises or lowers ringer volume. You can also activate vibrate and silent modes with the **Volume** key.
6. Jack for AC adapter and Micro-USB cable.
7. External speaker.
8. Accessory eyelet (for optional straps and lanyards).

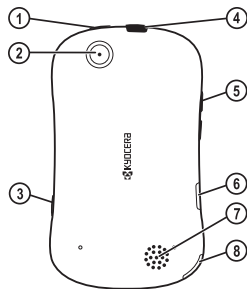

Warning: Inserting an accessory into the incorrect jack will damage the device.

The device is shown here in the open position. You can enter text using the QWERTY keypad.

1. Touch screen.
2. QWERTY keypad for entering numbers, letters, or symbols.
3. **Shift** key changes the case mode in text entry. Press the **Shift** key once to change case mode or press twice to toggle between case modes.
4. **Function** key enables you to type symbol characters or toggle between letters and symbols. Press the **Function** key once to change the input mode for the next character; press twice (within 2 seconds) to toggle between letters and symbols.
5. **Symbol** key accesses symbols that are not available on the QWERTY keypad.
6. **Delete** key erases characters during text entry.
7. **Enter** key selects an option on the screen or generates a carriage return during text entry.
8. **Space** key enters a space during text entry.

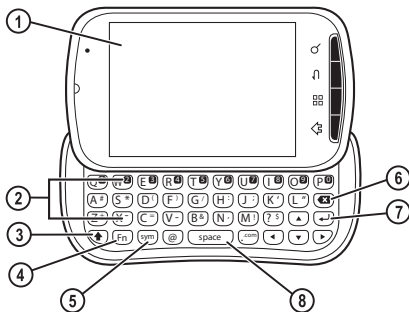

Main Menu

From the home screen, touch **Main Menu icon** to view the preloaded and any downloaded applications on your device. The following table shows applications that come with your device.

Note: Some applications need a Google account. If you are prompted for a Google account, follow the instructions on the screen.

Idle State >	Level 1 >	Level 2
Main Menu	Battery use	View battery usage by application.
	Books	Read your eBooks.
	Browser	Surf the Internet.
	Calculator	Perform basic mathematical functions.
	Calendar	Schedule appointments and set reminders.
	Camera	Take a picture or record a video.
	Clock	View clock and set alarms.
	Contacts	Access your contacts.
	Downloads	View downloaded applications.
	Eco Mode	Conserve your battery usage.
	Email	Access your email.
	Gallery	View media files stored on your SD card.
	Gmail	Access your Google email.
	Google Search	Search via text or voice with Google search engine.
Latitude	Share location with a friend on Google Maps.	
Maps	View locations on a map.	
Market	Download applications.	

Idle State >	Level 1 >	Level 2
	Messaging	Send and receive messages.
	Music	Play music.
	Navigation	Find directions with Google Maps.
	News & Weather	Read news feeds and weather updates.
	Phone	Make phone calls.
	Phone Help	Access help information for your device.
	Places	Find places near your location by category.
	Settings	Access these options: Wireless & networks, Call settings, Sound, Display, Location & security, PC connection, Applications, Accounts & sync, Privacy, Storage, Language & keyboard, Voice input & output, Accessibility, Date & time, and About phone.
	Talk	Send and receive Google instant messages.
	Voice Dialer	Use voice commands.
	Voice Search	Search via voice with Google search engine.
	YouTube	Watch videos.
Note: The menu items on your device can change depending on the options supported by your service provider. Check with your service provider.		

Google Account

You will need a Google account to access several features such as Gmail, Google Maps, Google Talk, and the Android Market. Before you are able to access these Google applications, you must enter your Google account information.

For more information on how to synchronize your Google account with your device, see “Accounts & sync” on page 65.

Create Account on Web

If you do not already have a Google account, you can create one via the Web.

1. From a computer, launch a Web browser.
2. Go to **www.google.com**.
3. Select **Sign-In** to see the Google login page.
4. Select **Create an account now** to create a new account.
5. Follow the prompts to create a free account.










 
 
 
 
 
Create Account from Device



 











 
 
You can create a Google account from your device.









1. From **Accounts & sync**, touch **Add account**.
2. Select the Google application.
3. Touch **Next** and follow the prompts to create a user name and password. You will also need to accept the Google Terms of Service.
4. Once your account is created, select the Google applications you wish to synchronize with your device.

Notification and Status Icons

These notification and status icons may appear on the top row of your device's screen. When you install applications on your device, new icons can be added.










	Alarm clock is set.
	Microphone is muted.
	Google Talk notification.
	Memory is full.
	Error notification.
	Missed call notification.
	Synchronization is active.
	An open Wi-Fi network is available.
	Wi-Fi signal level.
	Battery is empty.
	Battery is low.
	Battery is full.
	Battery is charging.
	Bluetooth is enabled.













	Bluetooth data connection is active.
	3G data service is available. The arrow animation indicates data connection activity.
	3G data service is currently dormant.
	1x digital service is available. The arrow animation indicates data connection activity.
	1x data service is currently dormant.
	Signal level. Fewer bars indicate a weaker signal.
	No signal.
	Your device is roaming in home network.
	The SD card is ready.
	USB is connected.
	Download in progress.
	Upload in progress.
	GPS is active.
	Headset is connected.
	Call is ongoing.
	Silent mode is active.








	Vibrate mode is active.
	Airplane mode is active.
	Speakerphone is on.
	Voicemail notification.
	Message notification.
	Gmail notification.
	Touch to display more status bar icons.
	TTY mode is active.

Common Android Icons

You can touch icons to initiate actions when they appear on your screen's working space. Icons are referred to in the user guide as follows:

	Main Menu icon launches the main menu. The main menu lists all the applications installed on your device.
	Call icon launches the Phone . The Call icon can also initiate a phone call.
	Browser icon launches the Browser .
	Sound icon displays when the sound is on while the device screen is locked.
	Vibrate icon displays when the sound is off while the device screen is locked.
	Lock icon displays when the device screen is locked.
	Trash icon is used to delete icons and shortcuts from your home screen.
	Answer icon displays when a call is received while the device is locked. Allows you to answer a call.
	End icon displays when a call is received while the device is locked or during a call. Allows you to end a call.

	Voicemail icon dials your voicemail.
	Message icon launches the text message compose screen.
	Favorites icon indicates that a contact is a favorite.
	More icon indicates that more features or fields are available.
	Add icon adds an entry to the screen.
	Subtract icon removes an entry from the screen.
	Search icon launches the search screen.
	Voice Search icon launches voice search screen. Follow the prompts.
	Shuffle icon enables the shuffle feature for Music .
	Playlist icon shows the current playlist you are listening to with Music .
	Repeat icon enables the repeat feature for Music .
	Take picture icon takes a picture with the Camera .

	Record video icon records a video with the Camcorder .
	Store location icon enables the store location feature for the Camera .
	Camera icon indicates your device is in camera mode.
	Camcorder icon indicates your device is in video mode.
	White balance icon enables the white balance feature for the Camera .
	Zoom icon enables the zoom feature for the Camera .
	Settings icon opens the settings for the Camera .
High	Video quality icon opens the video quality setting for the Camcorder .

Guide Conventions

In this guide, the following conventions are used when describing device features.

Touch means to touch an area on the screen. For example, “Touch **Done**” means to physically touch the word **Done** on your device screen.

Touch and hold means to touch and hold an area on the screen. For example, “Touch and hold a contact” means to physically touch a contact name on your device screen and hold it until the screen reacts.

Touch and drag means to touch an area on the screen and drag it to another location. For example, “Touch **Answer icon** and drag it right” means to physically touch **Answer icon** on your device screen and use your finger to move it right.

Flick means to touch an area on the screen and drag it quickly across the screen. For example, “Flick **Answer icon**” means to physically touch **Answer icon** on your device screen and use your finger to move it quickly to another area on the screen.

Press means to use a device key. For example, “Press the **Menu** key to access more features” tells you to physically press the **Menu** key on your device.

Press and hold means to use a device key. For example, “Press and hold the **Power** key” tells you to physically press the **Power** key on your device and hold it until the screen reacts.

Scroll means to swipe or slide to move through a list on the display. For example, “Scroll through your contacts list to choose a contact” means to physically swipe the screen with your finger up or down to scroll through the contact list on the display.

Select means to choose an option. For example, “Select **Settings**” means to physically touch the screen to select the highlighted **Settings** option.

> (greater than symbol) tells you to select an option from a menu or list. For example, “**Settings** > **Accessibility**” means to:

1. From the main menu, touch **Settings**.
2. Scroll to the **Accessibility** option.
3. Touch **Accessibility**.

2 Home Screen


The home screen is the starting point for all applications. You can access applications and view notifications.

Home Screen Overview

The home screen refers to the initial state of the device. This is also called the idle state. The home screen has the following elements.

1. Status bar displays notifications and other device icons.
2. Quick Search bar runs **Google Search**. You can do a text or word search using the Quick Search bar.
3. Work area displays widgets and shortcuts you want.
4. **Call icon** launches **Phone**.
5. **Main Menu icon** launches the main menu. This lists all the applications currently on your device.
6. **Browser icon** launches **Browser**.
7. Screen panel indicators identify which panel of the home screen you are currently on.

Note: Press the **Home** key from within any application to return to the home screen.

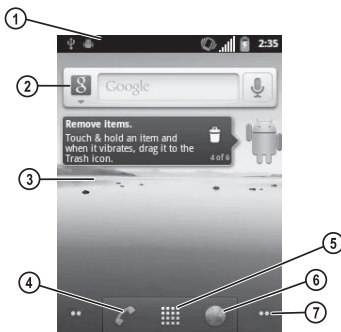

View Screen Panels

The home screen has five panels to place shortcuts and widgets on.

1. From the home screen, scroll to the left or right see another panel.
2. At any screen panel, you can do the following:
 - Touch **Call icon** to make calls with **Phone**.
 - Touch **Main Menu icon** to access the main menu.
 - Touch **Browser icon** to surf the Internet with **Browser**.
 - Touch and hold the screen to access features specific for that panel.
 - Press the **Menu** key to access more features.
 - Press the **Home** key to return to the center panel of your five panels.

Note: The screen panel indicators at the bottom of the screen show which panel you are currently viewing.

Device Key Options

Your device has dedicated keys that access the following features.

Power Device On

To turn the device on, press and hold the **Power** key until the screen turns on.

Power Device Off

1. To power the device off, press and hold the **Power** key.
2. Touch **Power off**.
3. Touch **OK** to confirm the power off request.

Enable Airplane Mode

While in an airplane, it is normally required that you turn off your mobile device because it emits RF signals that interfere with air traffic control. In airplane mode, however, your device does not emit RF signals. You cannot make or receive calls, send text messages, use a browser or bluetooth devices, but you can play games, use the calendar, set the clock, and make emergency calls to designated emergency numbers. Please check with uniformed personnel before operating your device in airplane mode.

1. To enable airplane mode, press and hold the **Power** key.
 2. Touch **Airplane mode**. The airplane mode icon will appear on the status bar.
- To disable airplane mode, repeat the steps.

Enable Silent Mode

You can enable silent mode for your device at any time.

1. To enable silent mode, press and hold the **Power** key.
2. Touch **Silent mode**. The vibrate only icon will appear on the status bar.

To disable silent mode, repeat the steps.

Note: If your device is locked, flick **Sound icon** to enable silent mode. To disable silent mode, flick **Vibrate icon**.

Lock Touch Screen

To avoid the screen from accidentally being touched, your touch screen will automatically lock after a length of time. You can also lock the touch screen manually at any time.

To lock the touch screen, press the **Power** key. The backlight will turn off while the screen is locked.

To unlock the touch screen, press the **Power** key. Then flick **Lock icon**.

Launch Google Search

To launch **Google Search** at any time, press the **Search** key. For more information, see “Google Search” on page 79.

Access Current Menu

To view features for the current application or screen, press the **Menu** key. The features will change depending on which application you are using.

Note: If one of the options is **More**, this means that more features are available than shown. Touch **More** to view these features.

Return to Home Screen

To return to the home screen at any time, press the **Home** key.

Return to Previous Screen

To return to the previous screen displayed on your device, press the **Back** key.

Adjust the Volume

To adjust the volume on your device, press the **Volume** key up or down. Which volume setting you adjust depends on the application you are using. For example, when you adjust the volume while playing music, you would adjust the media volume.

Home Screen Options

You can access the following features from the home screen.

Create a Shortcut

You can create a shortcut for your home screen.

1. At the home screen, touch and hold an empty space on the screen.
2. Touch **Shortcuts**.
3. Select a shortcut option from the list.

4. Complete the appropriate task. The shortcut will now appear on your home screen.

Note: From the home screen, you can also press the **Menu** key and touch **Add > Shortcuts** to create a shortcut.

Install a Widget

You can install a widget on your home screen.

1. At the home screen, touch and hold an empty space on the screen.
2. Touch **Widgets**.
3. Select a widget from the list.
4. Complete the installation. The widget will now appear on your home screen.

Note: From the home screen, you can also press the **Menu** key and touch **Add > Widgets** to install a widget.

Link to a Folder

You can create a shortcut to a folder on your device.

1. At the home screen, touch and hold an empty space on the screen.
2. Touch **Folders**.
3. Select a folder on your device. The folder shortcut will now appear on your home screen.

Note: From the home screen, you can also press the **Menu** key and touch **Add > Folders** to link to a folder.

Set the Wallpaper

You can change the wallpaper used on your device.

1. At the home screen, touch and hold an empty space on the screen.
2. Touch **Wallpapers**.
3. Select a wallpaper from the wallpapers on your device.
4. Touch **Set wallpaper** to set the wallpaper as the background.

Note: From the home screen, you can also press the **Menu** key and touch **Wallpaper** to set the wallpaper.

Manage Applications

1. At the home screen, press the **Menu** key.
2. Touch **Manage Apps**.
3. At the applications list, select an application to manage.

View Notifications

When you receive a notification, your device displays an icon in the status bar at the top of the screen. You will also hear or feel an alert, depending on the notification.

1. At the home screen, press the **Menu** key.
2. Touch **Notifications**.
3. At the notifications list, select a notification.
4. Complete the appropriate task.

Note: Any time you receive a notification, touch the icon and drag it down to open the notifications list. You do not need to be at the home screen.

Access Device Settings

1. At the home screen, press the **Menu** key.
2. Touch **Settings**.
3. At the **Settings** menu, select a setting to change.

For more information, see “Settings” on page 54.

Use Google Search

1. At the home screen, press the **Menu** key.
2. Touch **Search**.
3. Enter characters to search. For more information, see “Google Search” on page 79.

Access Main Menu

At the home screen, touch **Main Menu icon** to go to the main menu. This lists all the applications installed on your device.

Access Call History

At the home screen, touch **Call icon** to go to your call history. For more information, see “Call log” on page 30.

Launch Browser

At the home screen, touch **Browser icon** to launch the browser. For more information, see “Browser” on page 73.

Reposition an Item

1. At the home screen, touch and hold an item (such as a shortcut or widget) that you want to reposition. The item becomes moveable.
2. Drag the item to the desired location.
3. Release the item to finalize the new location.

Note: To reposition an item to an extended panel, drag the item to the edge of the screen until the home screen extends.

Delete an Item

1. At the home screen, touch and hold an item (such as a shortcut or widget) that you want to delete. The item becomes moveable.
2. Drag the item to the **Trash icon**.
3. Release the item to delete it from the home screen.

View Recent Applications

At the home screen, press and hold the **Home** key to view the last applications that you have used on your device.

3 Phone

From **Phone**, you can dial numbers.

Make Phone Calls

Make sure you are in an area where a signal can be received. Look for the signal strength icon on the home screen. The more bars, the stronger the signal. If there are no bars, move to where the signal strength is better.

There are several ways you can make a phone call.

Dial a Number

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Phone**.
3. If necessary, touch **Phone** again.
4. At the dialpad, enter a number.
5. Touch **Call icon** to dial the number.

Call a Contact

1. At the dialpad, touch **Contacts**.
2. At the contacts list, touch and hold a contact.
3. Touch **Call contact**.
4. If applicable, select a number from the list.
5. Complete the phone call.

Call a Favorite

1. At the dialpad, touch **Favorites**.
2. At the favorites list, touch **Call icon** next to the number you wish to dial.
3. Complete the phone call.

Redial a Number

1. At the dialpad, touch **Call log**.
2. At the records list, touch **Call icon** next to the number you wish to dial.
3. Complete the phone call.

Save Number to Contacts

1. When entering a number, press the **Menu** key.
2. Touch **Add to Contacts** to add the number to your **Contacts**.

Enter a Time Pause

1. When entering a number, press the **Menu** key.
2. Touch **Add 2-sec pause** to insert a time pause. A time pause causes the device to stop dialing for two seconds.
3. Enter the remaining numbers.
4. Touch **Call icon** to dial the number.

Enter a Hard Pause

1. When entering a number, press the **Menu** key.
2. Touch **Add wait** to insert a hard pause. A hard pause causes the device to wait until you confirm the dialing to continue.
3. Enter the remaining numbers.
4. Touch **Call icon** to dial the number.

Use Voice Dialer

You can use voice commands to call a contact or to dial a device number. For more information, see “Voice Dialer” on page 81.

Call Emergency Services

You can call an emergency code even if your device is locked or your account is restricted. When you call, your device enters emergency mode. This enables the emergency service exclusive access to your device to call you back, if necessary. To make or receive regular calls after dialing the code, you must exit this mode.

To dial an emergency code:

1. At the dialpad, enter the 3-digit emergency code.
2. Touch **Call icon** to dial emergency services.
3. When your call is complete, touch **End**.
4. Touch **Exit** to exit emergency mode.

Answer Phone Calls

When a call comes in, the device rings, vibrates, or lights up. The phone number of the caller also appears if it is not restricted. If the number is stored in your contacts list, the contact’s name appears.

There are several ways you can respond to an incoming call.

Answer a Call

When you receive a call alert, touch **Answer** to answer the call.

If your device is locked, flick **Answer icon** to answer the call.

Ignore a Call

When you receive a call alert, touch **Ignore** to silence the alert. If applicable, the call will go directly your voicemail.

If your device is locked, flick **End icon** to ignore the call.

End a Call

To end a phone call, touch **End**.

Adjust Volume during a Call

During a call, press the **Volume** key up or down to adjust the earpiece volume.

Dial Number during a Call

During a call, touch **Add call** to dial another number.

When you have two or more active calls, touch call status to toggle between the calls or **Merge calls** to create a conference call.

Create Conference Calls

1. During a call, touch **Add call** to dial another number.
2. Touch **Merge calls** to create a conference call.

During a conference call, touch **Manage** to access the phone lines on the conference call.

Use Dialpad during a Call

This feature works as a toggle. During a call, touch **Dialpad** to use the dialpad. Touch **Hide** again to close the dialpad.

Use Speaker during a Call

This feature works as a toggle. During a call, touch **On** under **Speaker** to activate the speakerphone. Touch **Off** to turn off the speakerphone.

Mute Sound during a Call

This feature works as a toggle. During a call, touch **On** under **Mute** to silence the microphone. Touch **Off** to turn off the microphone.

Use Bluetooth during a Call

1. This feature works as a toggle. During a call, press the **Menu** key.
2. Touch **Bluetooth** to connect to a paired Bluetooth device. Touch **Bluetooth** again to disconnect.

For more information, see “Bluetooth settings” on page 57.

Voicemail

You can access voicemail from your device. To control the settings associated with voicemail, see “Call settings” on page 59.

Configure your Voicemail

Before your device can receive voicemail messages, you need to set up a password and record a personal greeting with your service provider.

When you have set up your voicemail, all unanswered calls to your device are automatically transferred to voicemail, even if your device is in use or turned off.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Phone**.
3. At the dialpad, touch **Voicemail icon**.
4. Follow the system prompts to create a password and record a greeting.

Note: At the dialpad, you can also touch and hold 1 to access voicemail.

Respond to Voicemail Notifications

When you receive a voicemail, your device displays a voicemail icon in the status bar at the top of the screen. You will also hear or feel an alert, depending on your settings.

1. When you see the voicemail icon, touch the icon and drag it down to open the notifications list.
2. Touch the voicemail notification.
3. Follow the system prompts to retrieve the message.

Note: At the dialpad, you can touch and hold 1 to access voicemail at anytime.

Call log

From **Call log**, you can review your call history.

View Call Log

Incoming, outgoing and missed calls are recorded in a call log.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Phone**.
3. At the dialpad, touch **Call log**. Incoming, outgoing and missed calls are designated by icons.

4. At the call log, you can do the following:
 - Touch **Call icon** next to a number you wish to redial.
 - Touch and hold a record to access features for the specific record.
 - Press the **Menu** key to access more features.

Respond to Missed Call Notifications

When you miss a call, your device displays a missed call icon in the status bar at the top of the screen. You will also hear or feel an alert, depending on your settings.

1. When you see the missed call icon, touch the icon and drag it down to open the notifications list.
2. Touch the missed call notification to view your call log.

Call log Options

Redial a Number

1. At the call log, touch and hold a record.
2. Touch **Call [number]**.
3. Complete the phone call.

Edit Number before Redialing

1. At the call log, touch and hold a record.
2. Touch **Edit number before call**.
3. At the dialpad, edit the number.
4. Complete the phone call.

Save Record to Contacts

1. At the call log, touch and hold a record.
2. Touch **Add to contacts** to add the number to your **Contacts**.

View a Contact

1. At the call log, touch and hold a record.
2. Touch **View contact** to see the contact detail screen.

Send Message to Number

1. At the call log, touch and hold a record.
2. Touch **Send text message**.
3. Complete the message.

Delete a Record

1. At the call log, touch and hold a record.
2. Touch **Remove from call log**.
3. Touch **OK** to confirm.

Delete All Records

1. At the call log, press the **Menu** key.
2. Touch **Clear call log**.
3. Touch **OK** to confirm.

4 Contacts

Use **Contacts** to store information about a person or company.

View Contacts List

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Contacts**.
3. At the contacts list, you can do one of the following:
 - Touch a contact to view details.
 - Touch and hold a contact to access features for the specific contact.
 - Press the **Menu** key to access more features.

Create a Contact

1. At the contacts list, press the **Menu** key.
2. Touch **New contact**.
3. At the edit contact screen, touch **First name** to enter a first name.
4. Touch **Last name** to enter a last name.
5. Touch **Phone** to enter the phone number.
6. If applicable, enter additional phone numbers, email addresses, and other contact details.
7. Touch **Done** to save.

Send Message to Contact

1. At the contacts list, touch and hold a

Contact List Options

View Favorites

1. At the contacts list, touch **Favorites**.
2. At the favorites list, you can do one of the following:
 - Touch **Call icon** to call the contact.
 - Touch a contact to view details.
 - Touch and hold a contact to access features for the specific contact.
 - Press the **Menu** key to access more features.

To return to the contacts list, touch **Contacts**.

View a Contact

1. At the contacts list, touch and hold a contact.
2. Touch **View contact** to see the contact detail screen.

Call a Contact

1. At the contacts list, touch and hold a contact.
2. Touch **Call contact**.
3. If applicable, select a number from the list.
4. Complete the phone call.

contact.

2. Touch **Text contact**.

3. If applicable, select an address from the list.
4. Complete the message.

Add Contact to Favorites

1. At the contacts list, touch and hold a contact.
2. Touch **Add to favorites**.

To remove the contact from favorites, select **Remove from favorites**.

Edit a Contact

1. At the contacts list, touch and hold a contact.
2. Touch **Edit contact**.
3. Change the contact information as needed.
4. Touch **Done** to save.

Delete a Contact

1. At the contacts list, touch and hold a contact.
2. Touch **Delete contact**.
3. Touch **OK** to confirm.

Find a Contact

1. At the contacts list, press the **Menu** key.
2. Touch **Search**.
3. Enter letters to search by name. As you type, the screen displays contacts that match the typed letters.

Display Only Contacts with Numbers

1. At the contacts list, press the **Menu** key.

2. Touch **Display options**.
3. Touch **Only contacts with phones** to only display contacts that have phone numbers. A check mark indicates **Only contacts with phones** is enabled.
4. Touch **Done** to save.

Sort Contacts

1. At the contacts list, press the **Menu** key.
2. Touch **Display options**.
3. Touch **Sort list by**.
4. Select a sort option from the list.
5. Touch **Done** to save.

Set Contact Display

1. At the contacts list, press the **Menu** key.
2. Touch **Display options**.
3. Touch **View contact names as**.
4. Select a display option from the list.
5. Touch **Done** to save.

Add Contacts from an Account

1. At the contacts list, press the **Menu** key.
2. Touch **Accounts** to access your account settings.
3. Touch **Add account**.
4. Select an application or account type.
5. Complete the settings as needed. You may need the applicable user name and password for the account.

Import Contacts from SD Card

1. At the contacts list, press the **Menu** key.
2. Touch **Import/Export > Import from SD card**.
3. If applicable, choose where to place imported contacts.
4. If applicable, choose a vCard file on your card to read.

To export contacts to an SD card, select **Export to SD card**.

Share Contacts

1. At the contacts list, press the **Menu** key.
2. Touch **Import/Export > Share visible contacts**.
3. Select a sharing option.
4. Complete the appropriate task to send the contact list.

Contact Detail Options

Call a Number

1. When viewing a contact, touch **Call icon** next to a number you wish to dial.
2. Complete the phone call.

Send Message to Number

1. When viewing a contact, touch **Message icon** next to a number you wish to send a message.
2. Complete the message.

Assign Contact to Favorites

When viewing a contact, touch **Favorites icon** to add the contact to your favorites list. To remove the contact from your favorites, touch **Favorites icon** again.

Edit Contact Details

1. When viewing a contact, press the **Menu** key.
 2. Touch **Edit contact**.
 3. At the edit contact screen, touch a field to edit a detail.
 4. Touch **Done** to save.
- To access more detail fields, touch **More icon**.

Add Contact Details

1. When viewing a contact, press the **Menu** key.
 2. Touch **Edit contact**.
 3. At the edit contact screen, touch **Add icon** where you need to add a detail, such as a number or address. To remove a contact detail, touch **Subtract icon** next to a number or address.
 4. Enter the number or address.
 5. Touch **Done** to save.
- To view more detail fields, touch **More icon**.

Change Number Label

1. When viewing a contact, press the **Menu** key.
2. Touch **Edit contact**.

3. At the edit contact screen, touch the label next to the phone number.
4. Select a label from the list.
5. Touch **Done** to save.

Assign Image to Contact

1. When viewing a contact, press the **Menu** key.
2. Touch **Edit contact**.
3. At the edit contact screen, touch the image icon.
4. Take a new picture or assign one from the **Gallery**.
5. Touch **Done** to save.

Assign Ringtone to Contact

1. When viewing a contact, press the **Menu** key.
2. Touch **Options**.
3. Touch **Ringtone** and select a sound from the list.
4. Touch **OK** to assign to contact.

Send Calls to Voicemail

1. When viewing a contact, press the **Menu** key.
2. Touch **Options**.
3. Touch **Incoming calls** to send incoming calls from the contact directly to your voicemail. A check mark indicates **Incoming calls** is enabled.

Share a Contact

1. When viewing a contact, press the **Menu** key.
2. Touch **Share** and select a sharing option.
3. Complete the appropriate task to send the contact.

Delete a Contact

1. When viewing a contact, press the **Menu** key.
2. Touch **Delete contact**.
3. Touch **OK** to confirm.

5 Messaging

Use **Messaging** to manage messages on your device.

View All Message Threads

All messages are displayed as a list of threads. A thread is group of messages sent between you and a contact, number or email address. The thread with the most recent message is displayed first.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Messaging**. All message threads are displayed. Threads are displayed in the following ways:
 - Unread threads are in bold text. The number of messages in the thread is shown in parenthesis after the address of the sender, for example **Luthor Bone (5)**. If there is only one message in a thread, no number is displayed.
 - Read threads are in plain text. Messages with attachments or messages that are locked are designated by applicable icons.
 - Drafts are designated by an icon.
 - Browser alerts are designated by an icon.
 - Scheduled messages are designated by an icon. These messages will be sent at the time set by you.

- Pending messages are designated by an icon. These messages will be sent when possible.
 - Failed messages are designated by an icon. These messages cannot be sent.
3. At the thread list, you can do the following:
 - Touch a thread to view messages in the thread. When viewing a thread, touch a message to view that individual message.
 - Touch and hold a thread to access features for the specific thread.
 - Touch **New message** to create a new message.
 - Press the **Menu** key to access more features.

Create a Message

You can only send messages to phone numbers capable of receiving them or to email addresses. If the character and file size limit for a single message is exceeded, the message must be edited to meet the size limitation.

1. At the thread list, touch **New message**.
2. At the compose screen, enter a recipient's phone number or email address. You can also enter a contact name.

3. Enter a message. Touch and hold the text entry field to access more text entry features.
4. If applicable, press the **Menu** key to access more message features.
5. When done, touch **Send**.

If you receive a call while creating a message, a notification appears. Do one of the following:

- Touch **Ignore** to ignore the call and return to the compose screen.
- Touch **Answer** to answer the call. Your message is automatically saved as a draft.

Respond to Message Notifications

When you receive a message, your device displays a message icon in the status bar at the top of the screen. You will also hear or feel an alert, depending on your settings.

1. When you see the message icon, touch the icon and drag it down to open the notifications list.
2. Touch the messages notification.
3. If necessary, touch a thread from the thread list. Threads containing new messages are in bold text.
4. If necessary, touch **Download** to get media attachments.
5. At the message thread, compose your reply.

Compose Message Options

Send Message to Contact

1. At the compose message screen, enter a name at the top of the screen.
2. Select a contact from your contacts.
3. Complete your message.

Add a Subject

1. At the compose message screen, press the **Menu** key.
2. Touch **Add subject**.
3. Enter a subject in the subject field.
4. Complete your message.

Create a Media File

1. At the compose message screen, press the **Menu** key.
2. Touch **Attach**.
3. Select an option from the list. For example, touch **Capture video** to record a video.
4. Complete your message.

Attach a Media File

1. At the compose message screen, press the **Menu** key.
2. Touch **Attach**.
3. Select an option from the list. For example, touch to attach a picture.
4. Select a media file.
5. Complete your message.

Attach a Slideshow

1. At the compose message screen, press the **Menu** key.
2. Touch **Attach > Slideshow**.
3. Use the controls to create a slideshow of multiple media files.
4. Complete your message.

Insert a Smiley

1. At the compose message screen, press the **Menu** key.
2. Touch **Insert smiley**.
3. Select a smiley from the list.
4. Complete your message.

Return to Threads List

1. At the compose message screen, press the **Menu** key.
2. Touch **All threads** to return to the threads list. If you are in the middle of a message, it will be saved as a draft.

Discard a Message

1. At the compose message screen, press the **Menu** key.
2. Touch **Discard** to return to the threads list without saving the draft.

Set Priority

1. At the compose message screen, press the **Menu** key.
2. Touch **Set priority**.
3. Select a priority level.
4. Complete your message.

Text Entry Options

Enter Text with Android Keyboard

1. When composing a message, touch a text entry field to activate the virtual Android keyboard.
2. At the keyboard, you can do one of the following:
 - Touch keyboard to enter text.
 - Touch and hold entry field to access more text options.
 - If applicable, touch **Done** to close the keyboard. Otherwise, press the **Back** key.

You can modify the settings for your Android keyboard. For more information, see “Android keyboard” on page 68.

Enter Text with QWERTY Keyboard

1. If applicable, slide open your device’s built-in keyboard.
2. When composing a message, scroll to a text entry field. You can do one of the following:
 - Press the keyboard buttons to enter text.
 - Touch and hold entry field to access more text options.

You can modify the settings for your built-in keyboard. For more information, see “Built-in keyboard” on page 69.

Enter Numbers and Symbols

1. When entering text, touch **SYM**. The keyboard changes to show numbers and symbols.
2. Enter characters as needed. Touch **Shift** to see more characters.

To return to letters, touch **ABC**.

Change Letter Case

Your device enters letters in sentence case. You can change this to upper or lower case, if needed.

When entering text, touch **Shift** to change the letter case mode. The keyboard will change accordingly.

An indicator next your Android keyboard **Shift** key notifies you when the Caps lock is on. Touch **Shift** to turn the Caps lock off.

Add Smileys

When entering text, touch **: -)** to enter a smiley. Touch and hold **: -)** see more smileys.

Use Word Dictionary

When you create a message, your device can speed up word completion. Your device uses a dictionary to guess words that you are trying to spell.

When entering text, touch words from the choices shown to add them to your message. If the choices do not fit on the screen, use the arrow controls to view more words.

For example, to enter the word “Wyoming”, enter **w > y > o** and touch **Wyoming**.

Add Word to Dictionary

1. When entering text, touch and hold the entry field after you type a word.
2. Touch the applicable **Add [word] to dictionary** option to add the word to your user dictionary.
3. Touch **OK** to confirm.

Copy and Paste Text

1. When entering text, touch and hold the entry field after typing content.
2. Touch a selection option. For example, touch **Select all** to choose all the content. The content you select is highlighted.
3. Move the cursor to the position you want to paste. Touch and hold the entry field again.
4. Touch to place the text.

Note: To copy the content for use later, touch **Copy** to copy the content.

Delete Text

1. When entering text, touch and hold the entry field after typing content.
2. Touch a selection option. For example, touch **Select all** to choose all the content. The content you select is highlighted.
3. Touch and hold the entry field again.
4. Touch **Cut** to delete the selected content.

Note: To delete text one character at a time, touch **Delete**.

Change Input Method

1. When entering text, touch and hold the entry field.
2. Touch **Input method**.
3. Select an option for entering text. This may change how your keyboard operates.

Thread List Options

Create a Message

1. At the threads list, press the **Menu** key.
2. Touch **Compose**.
3. At the compose screen, enter a recipient's phone number or email address. You can also enter a contact name.
4. Enter a message. Touch and hold the text entry field to access more text entry features.
5. If applicable, press the **Menu** key to access more message features.
6. When done, touch **Send**.

Find a Message

1. At the threads list, press the **Menu** key.
2. Touch **Search**.
3. Enter characters into search field.
4. Touch **Search icon** to start the search. Messages that match your search are displayed on the screen.

View a Thread

1. At the threads list, touch and hold a thread.
2. Touch **View thread** to view the list of messages.

View the Sender

1. At the threads list, touch and hold a thread.
2. Touch **View contact** to view the sender contact information.

Add Sender to Contacts

1. At the threads list, touch and hold a thread.
2. Touch **Add to Contacts** to add the sender to your **Contacts**.

Delete a Thread

1. At the threads list, touch and hold a thread.
2. Touch **Delete thread**.
3. Touch **Delete** to confirm.

Delete All Threads

1. At the threads list, press the **Menu** key.
2. Touch **Delete threads**.
3. Touch **Delete** to confirm.

View Thread Options

Reply to a Thread

1. When viewing a thread, enter a message in the text entry field at the bottom of the screen. All thread recipients are included in the reply.
2. When done, touch **Send**.

Call Sender

1. When viewing a thread, press the **Menu** key.
2. Touch **Call**.
3. Complete the phone call.

Add a Subject

1. When viewing a thread, press the **Menu** key.
2. Touch **Add subject**.
3. Enter a subject in the subject field.
4. Complete your reply message.

Create a Media File

1. When viewing a thread, press the **Menu** key.
2. Touch **Attach**.
3. Select an option from the list. For example, touch **Capture video** to record a video.
4. Complete your reply message.

Attach a Media File

1. When viewing a thread, press the **Menu** key.
2. Touch **Attach**.
3. Select an option from the list. For example, touch **Pictures** to attach a picture.
4. Select a media file.
5. Complete your reply message.

Attach a Slideshow

1. When viewing a thread, press the **Menu** key.
2. Touch **Attach > Slideshow**.
3. Use the controls to create a slideshow of multiple media files.
4. Complete your reply message.

Insert a Smiley

1. When viewing a thread, press the **Menu** key.
2. Touch **Insert smiley**.
3. Select a smiley from the list.
4. Complete your reply message.

View the Sender

1. When viewing a thread, press the **Menu** key.
2. Touch **View contact** to view the sender contact information.

Add Sender to Contacts

1. When viewing a thread, press the **Menu** key.
2. Touch **Add to Contacts** to add the sender to your **Contacts**.

View an Attachment

1. When viewing a thread, touch and hold a message with an attachment. Messages with attachments are designated by icons.
2. Touch the applicable option. For example, touch **View picture** to view a picture.

Play an Attachment

1. When viewing a thread, touch and hold a message with an attachment. Messages with attachments are designated by icons.
2. Touch the applicable option. For example, touch **Play video** to play a video.
3. Touch the screen icons to control the playback.

Save an Attachment

1. When viewing a thread, touch and hold a message with an attachment. Messages with attachments are designated by icons.
2. Touch the applicable option. For example, touch **Save picture** to save a picture. The attachment is saved to your SD card

Share an Attachment

1. When viewing a thread, touch and hold a message with an attachment. Messages with attachments are designated by icons.
2. Touch the applicable option. For example, touch **Share picture** to share a picture.

3. Select a sharing option from the list.
4. Complete the appropriate task to share the attachment.

Lock a Message

1. When viewing a thread, touch and hold a message.
2. Touch **Lock message** to protect it from accidental deletion. To unlock a message, touch **Unlock message**.

Forward a Message

1. When viewing a thread, touch and hold a message.
2. Touch **Forward** to open compose message screen, with message text added.
3. Complete your message.

Copy Message Text

1. When viewing a thread, touch and hold a message.
2. Touch **Copy message text** to copy the text in a message.

View Message Details

1. When viewing a thread, touch and hold a message.
2. Touch **View message details** to view the details.
3. Touch **OK** to return to the thread.

Return to Threads List

1. When viewing a thread, press the **Menu** key.
2. Touch **All threads** to return to the threads list. If you are in the middle of a reply, it will be saved as a draft.

Set Priority

1. When viewing a thread, press the **Menu** key.
2. Touch **Set priority**.
3. Select a priority level.
4. Complete your reply message.

Delete a Message

1. When viewing a thread, touch and hold a message.
2. Touch **Delete message**.
3. Touch **Delete** to confirm.

Delete a Thread

1. When viewing a thread, press the **Menu** key.
2. Touch **Delete thread**.
3. Touch **Delete** to confirm.

Message Settings

Message settings affect all messages unless you change them for an individual message. At the thread list, press the **Menu** key and touch **Settings** to modify the following features.

Delete Old Messages Automatically

Touch **Delete old messages** to delete old messages automatically when message limits are reached. A check mark indicates **Delete old messages** is enabled.

Set Text Message Limit

You set the limit for the number of messages allowed for each conversation.

1. Touch **Text message limit**.
2. Use the controls to enter a new limit.
3. Touch **Set** to save.

Set Multimedia Message Limit

You set the limit for the number of multimedia messages allowed for each conversation.

1. Touch **Multimedia message limit**.
2. Use the controls to enter a new limit.
3. Touch **Set** to save.

Set CMAS Alerts

Touch **CMAS Alerts** to choose the type of Commercial Mobile Alert System messages you receive from the federal government.

Enable Multimedia Message Read Reports

Touch **Read reports** to request a notice when a message you send is read. A check mark indicates **Read reports** is enabled.

Enable Auto-retrieve

Touch **Auto-retrieve** to automatically retrieve messages with multimedia content. If disabled, you will be prompted to download messages with multimedia content. A check mark indicates **Auto-retrieve** is enabled.

Enable roaming auto-retrieve

Touch **Roaming auto-retrieve** to automatically retrieve messages with multimedia content when roaming. If disabled, you will be prompted to download messages with multimedia content. A check mark indicates **Roaming auto-retrieve** is enabled.

Enable Notifications

Touch **Notifications** to display message notifications in the status bar. A check mark indicates **Notifications** is enabled.

Set Message Ringtone

1. Touch **Select ringtone**.
2. Select a sound from the list. Touch the names to preview a sound.
3. Touch **OK** to save.

Set Message Vibrate Alert

1. Touch **Vibrate**.
2. Select one of the following:
 - **Always** enables vibrate for message alerts.
 - **Only when silent** enables vibrate when **Silent mode** is enabled.
 - **Never** disables vibrate for message alerts.

Enable Callback Number

Touch **Callback number** to send a callback number with your outgoing messages. A check mark indicates **Callback number** is enabled.

Set Callback Number

1. Touch **Edit callback number**.
2. Modify the callback number.
3. Touch **OK** to save.

6 Gallery

Use **Gallery** to store media files and other downloads.

View Gallery

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Gallery**. Your media files are grouped into albums. The albums are sorted in several ways, including by source and file types. This allows you to quickly browse your files.
3. At the albums list, you can do one of the following:
 - Touch a group to view the file list.
 - Touch and hold a group to access features for the specific group.
 - Press the **Menu** key to access more features.

Take a Picture

1. At the albums list, touch **Camera icon**.
2. Take the picture.

File List Options

View a Slideshow

1. At a file list, select a file.
2. Touch **Slideshow** to start the slideshow of all files in the album. To stop the slideshow, touch the screen.

View a File

1. At a file list, select a file.
2. At the file display, you can do one of the following:
 - Touch the screen to access commonly used features and controls.
 - Scroll left to view the previous file in the album.
 - Scroll right to view the next file in the album.
 - Press the **Menu** key to access more features.

Play a File

1. At a file list, select a file.
2. Touch the screen to use the playback controls.

Share a File

1. At a file list, touch and hold a file.
2. Touch **Share**.
3. Select a sharing option from the list.
4. Complete the appropriate task to share the file.

Share Multiple Files

1. At a file list, touch and hold a file.
2. Touch other files to select them. A check mark indicates a file has been selected. Touch again to remove a check mark.
3. Touch **Share**.
4. Select a sharing option from the list.
5. Complete the appropriate task to share the file.

Rotate a File

1. At a file list, touch and hold a file.
2. Touch **Rotate Left** or **Rotate Right** to rotate the file 90 degrees.

Crop a File

1. At a file list, touch and hold a file.
2. Touch **Crop**.
3. Touch the highlighted border to display the crop tools. Crop the file as needed. To keep the aspect ratio when cropping, touch and hold one of the four corners.
4. Touch **Save** to save the cropped file.

Assign a File

1. At a file list, touch and hold a file.
2. Touch **Set as**.
3. Select how you want to assign the file.
4. Complete the appropriate task to assign the file.

View File Details

1. At a file list, touch and hold a file.
2. Touch **Details** view the file details.
3. Touch **OK** to close the detail screen.

Delete a File

1. At a file list, touch and hold a file.
2. Touch **Delete**.
3. Touch **OK** to confirm.

Delete Multiple Files

1. At a file list, touch and hold a file.
2. Touch other files to select them. A check mark indicates a file has been selected. Touch again to remove a check mark.
3. Touch **Delete**.
4. Touch **OK** to confirm.

7 Music

Use **Music** to playback music files stored on your SD card.

Play a Song

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Music**.
3. At the music library, touch **Songs**.
4. At the song list, you can do one of the following:
 - Touch a song title to play it. Use the controls displayed on the screen to control playback.
 - Touch and hold a song title to access features for the specific song.
 - Press the **Menu** key to access more features.

View Artists

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Music**.
3. At the music library, touch **Artists**.
4. At the artist list, you can do one of the following:
 - Touch an artist name to view the albums associated with the artist. Touch an album to view the album song list.
 - Touch and hold an artist name to access features for the specific artist.
 - Press the **Menu** key to access more features.

View Albums

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Music**.
3. At the music library, touch **Albums**.
4. At the album list, you can do one of the following:
 - Touch an album name to view the album song list.
 - Touch and hold an album name to access features for the specific album.
 - Press the **Menu** key to access more features.

View Playlists

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Music**.
3. At the music library, touch **Playlists**.
4. At the playlist list, you can do one of the following:
 - Touch a playlist name to view song list.
 - Touch and hold a playlist to access features for the specific playlist.
 - Press the **Menu** key to access more features.

Load a Song

Music files can be loaded onto your device via the browser or a message. You can also use the following steps to load music from your computer via a Micro-USB cable.

Note: The music player will read music saved in MP3 format (other file formats may not be supported).

1. Connect the Micro-USB cable to the Micro-USB jack on your device.
2. Connect the Micro-USB cable to the USB port on your computer.
3. When you see the USB connection icon, touch the icon and drag it down to open the notifications list.
4. Touch the USB connection notification.
5. Touch **Mass storage**.

Note: You do not have to install any additional software when using the device in Mass Storage mode.

6. Touch **OK** to confirm.
7. On your computer, you will see your device as a removable disk drive.
8. Open the removable disk drive.
9. Open the **Music** folder on the memory card.
10. Drag and drop music files to the **Music** folder.
11. When you are done transferring files, disconnect your device from your computer.

Music Library Options

Enable Music Shuffle

1. At the music library, press the **Menu** key.
2. Touch **Shuffle all** to play music files in a random order. To disable the shuffle, touch **Shuffle icon**.

Enable Party Shuffle

1. At the music library, press the **Menu** key.
2. Touch **Party shuffle** to play music files based on the initial file you choose. The files will be played in a random order. To disable the shuffle, touch **Party shuffle off**.

Search for Music

1. When viewing a song, an album, or an artist, touch and hold a name.
2. Touch **Search** to search for the song, album or artist.
3. Select a searching option from the list.
4. Complete the appropriate task to share the attachment.

Play All Songs

1. At the music library, touch **Songs**.
2. At the artist list, press the **Menu** key.
3. Touch **Play all** to play all the songs in your library.

Create a Playlist

1. When viewing a song, an album, or an artist, touch and hold a name.
2. Touch **Add to playlist** > **New**.
3. Enter a name for the playlist.
4. Touch **Save** to create the playlist and add the song(s) to it.

Play a Playlist

1. At the music library, touch **Playlists**.
2. At the playlist list, touch and hold a playlist.
3. Touch **Play** to play the playlist.

Play an Album

1. At the music library, touch **Albums**.
2. At the album list, touch and hold an album.
3. Touch **Play** to play the album.

Play All Songs by an Artist

1. At the music library, touch **Artists**.
2. At the artist list, touch and hold an artist name.
3. Touch **Play** to play all songs by the artist.

Add Song to a Playlist

1. When viewing a song, an album, or an artist, touch and hold a name.
2. Touch **Add to playlist**.
3. Select a playlist to add your song to it.

Remove Song from a Playlist

1. At the music library, touch **Playlists**.
2. At the playlist list, touch a playlist.
3. At the song list, touch and hold a song.
4. Touch **Remove from playlist** to remove the song from the playlist.

Assign Song as a Ringtone

1. At the music library, touch **Songs**.
2. At the song list, touch and hold a song.
3. Touch **Use as phone ringtone** to assign the song as your default ringtone.

Delete a Playlist

1. At the music library, touch **Playlists**.
2. At the playlist list, touch and hold a playlist.
3. Touch **Delete** to delete the playlist.

Delete a Song

1. At the music library, touch **Songs**.
2. At the song list, touch and hold a song.
3. Touch **Delete** to delete the song.
4. Touch **OK** to confirm.

Delete an Album

1. At the music library, touch **Albums**.
2. At the album list, touch and hold an album.
3. Touch **Delete** to delete the entire album.
4. Touch **OK** to confirm.

Delete All Songs by an Artist

1. At the music library, touch **Artists**.
2. At the artist list, touch and hold an artist name.
3. Touch **Delete** to delete all songs by the artist.
4. Touch **OK** to confirm.

Song Options

View Current Playlist

1. During a song playback, press the **Menu** key.
2. Touch **Playlist icon** to view your current playlist. To return to the song playback screen, press the **Back** key.

Enable Music Shuffle

This feature works as a toggle. During a song playback, touch **Shuffle icon** to play music files in a random order. To disable the shuffle, touch **Shuffle icon** again.

Enable Song Repeat

This feature works as a toggle. During a song playback, touch **Repeat icon** once to repeat the playlist or twice to repeat the song only. To disable the repeat, touch **Repeat icon** again.

View Music Library

1. During a song playback, press the **Menu** key.
2. Touch **Library** to view to your music library. The song will continue playback. To return to the song playback screen, touch the song title at the bottom of the screen.

8 Camera

Use **Camera** to take pictures and record videos.

Camera Tips

Before using your device's camera, here are some tips:

- You must have an SD card installed to take pictures or record videos.
- You cannot use your camera while your device is connected to a computer and the storage card is recognized as a USB drive.
- If you get a low memory error, check your resolution and quality compression settings.

Take a Picture

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Camera**.
3. Adjust the settings as needed.
4. To take the picture, touch **Take picture icon**. The new image is saved to your **Gallery**.

Record a Video

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Camera**.

3. Use the slider control to switch to video mode.
4. Adjust the settings as needed.
5. To start the recording, touch **Record video icon**.
6. To end the recording, touch **Record video icon** again. The new video is saved to your **Gallery**.

Camera Options

Save Store Location

1. When taking a picture, touch **Store location icon**.
2. Touch **On** to save the store location with your picture.
3. Touch **Store location icon** close and confirm.

Review Last Picture

When taking a picture, touch the thumbnail in the right corner to view the last picture taken or saved to your SD card.

You can view the picture as needed. For more information, see “Gallery” on page 45.

Switch to Camcorder

When taking a picture, use the slide control to switch from the **Camera icon** to the **Camcorder icon**. You can now record a video.

Set White Balance

1. When taking a picture, touch **White balance icon**.
2. Select a color temperature from the list.
3. Touch **White balance icon** to close and confirm.

Use Camera Zoom

1. When taking a picture, touch **Zoom icon**.
2. Use the slider control to zoom in or out.
3. Touch **Zoom icon** to close and confirm.

Your current zoom level is shown on the screen.

Set Focus Mode

1. When taking a picture, touch **Settings icon**.
2. Scroll to **Focus mode**.
3. Select a focus option for your pictures.
4. Touch **Settings icon** to close and confirm.

Set Scene Mode

1. When taking a picture, touch **Settings icon**.
2. Scroll to **Scene mode**.
3. Select a scene mode for your pictures.
4. Touch **Settings icon** to close and confirm.

Set Picture Size

1. When taking a picture, touch **Settings icon**.
2. Scroll to **Picture size**.
3. Select a default size for your pictures.

4. Touch **Settings icon** to close and confirm.

Note: If you select a larger picture size, the pictures you take will be larger in file size.

Set Picture Quality

1. When taking a picture, touch **Settings icon**.
2. Scroll to **Picture quality**.
3. Select a quality level for your videos.
4. Touch **Settings icon** to close and confirm.

Note: If you select a higher quality level, the pictures you take will be larger in file size.

Set Color Effect

1. When taking a picture, touch **Settings icon**.
2. Scroll to **Color effect**.
3. Select a color option for your pictures.
4. Touch **Settings icon** to close and confirm.

Set Auto Exposure

1. When taking a picture, touch **Settings icon**.
2. Scroll to **Auto exposure**.
3. Select an exposure option for your pictures.
4. Touch **Settings icon** to close and confirm.

Restore Default Settings

1. When recording a video, touch **Settings icon**.
2. Scroll to **Camera settings**.
3. Touch **Restore to defaults** to reset camera settings to their defaults.
4. Touch **Settings icon** to close and confirm.

Camcorder Options

Review Last Video

1. When recording a video, touch **Review icon** to view the last video recorded or saved to your SD card.
2. Touch the screen to play the video. Use the playback controls on the screen.

You can view the video as needed. For more information, see “Gallery” on page 45.

Switch to Camera

When recording a video, use the slide control to switch from the **Camcorder icon** to the **Camera icon**. You can now take a picture.

Set White Balance

1. When recording a video, touch **White balance icon**.
2. Select a color temperature from the list.
3. Touch **White balance icon** to close and confirm.

Set Video Quality

1. When recording a video, touch **Video quality icon**.
2. Select a quality level for your videos.
3. Touch **Video quality icon** to close and confirm.

Note: If you select a higher quality level, the videos you record will be larger in file size.

Set Color Effect

1. When recording a video, touch **Settings icon**.
2. Scroll to **Color effect**.
3. Select a color option for your videos.
4. Touch **Settings icon** to close and confirm.

Set Auto Exposure

1. When recording a video, touch **Settings icon**.
2. Scroll to **Auto exposure**.
3. Select an exposure option for your videos.
4. Touch **Settings icon** to close and confirm.

Restore Default Settings

1. When recording a video, touch **Settings icon**.
2. Scroll to **Camera settings**.
3. Touch **Restore to defaults** to reset camcorder settings to their defaults.
4. Touch **Settings icon** to close and confirm.

Settings Menu

Select **Settings** to access the following features:

Level 1 >	Level 2 >	Level 3
Settings	Wireless & networks	Access these options: Airplane mode, Wi-Fi, Wi-Fi settings, Bluetooth, Bluetooth settings, and Mobile networks.
	Call settings	Access these options: Voicemail service, Voicemail settings, North American dialing, International dialing, TTY mode, Voice Privacy, DTMF Tones, Accounts, and Use Internet calling.
	Sound	Access these options: Silent mode, Vibrate, Volume, Phone ringtone, Notification ringtone, Audible touch tones, Audible selection, Screen lock sounds, Haptic feedback, Hearing aid, and Emergency tone.
	Display	Access these options: Brightness, Auto-rotate screen, Animation, Screen timeout, Keyboard timeout, and Notification blink.
	Location & security	Access these options: Use wireless networks, Use GPS satellites, Use assisted GPS, Set up screen lock, Visible passwords, Select device administrators, Use secure credentials, Install from SD card, Set password, and Clear storage.
	PC connection	Access these options: Default connection type and Ask me.
	Applications	Access these options: Unknown sources, Quick launch, Manage applications, Running services, Storage use, Battery use, and Development.
	Accounts & sync	Access these options: Background data and Auto-sync.

Level 1 >	Level 2 >	Level 3
	Privacy	Access these options: Back up my data , Automatic restore , and Factory data reset .
	Storage	Access these options: Unmount SD card and Erase SD card .
	Language & keyboard	Access these options: Select language , User dictionary , Swype , Swype (settings) , Android keyboard , Android keyboard (settings) , and Built-in keyboard .
	Voice input & output	Access these options: Voice recognizer settings and Text-to-speech settings .
	Accessibility	Manage accessibility options for applications.
	Date & time	Access these options: Automatic , Set date , Select time zone , Set time , Use 24-hour format , and Select date format .
	About phone	Access these options: Status , Battery use , Legal information , and System tutorial .
	System updates	Access these options: Update profile , Update firmware and Update Kyocera software .

Wireless & networks

From **Wireless & networks**, you can modify the following features.

Enable Airplane Mode

While in an airplane, it is normally required that you turn off your device because it emits wireless signals that interfere with air traffic control. In airplane mode, however, your device does not send wireless signals.

Touch **Airplane mode** to enable airplane mode and disable all wireless signals. A check mark indicates that your device is in airplane mode.

Wi-Fi settings

From **Wi-Fi settings**, you can modify the following features.

Enable Wi-Fi

Wi-Fi provides wireless Internet connection when connected to a wireless access point over a distance of up to 328-feet (100-meter). The availability and range of Wi-Fi varies depending on environmental obstructions through which the signal passes.

Before you can connect your device with a wireless local area network, you need to enable the Wi-Fi feature on your device.

Touch **Wi-Fi** to enable Wi-Fi. A check mark indicates Wi-Fi is active. If your device does not automatically scan for available networks, you will be prompted to begin a scan. Once the scan is complete, a list of available networks is shown.

Note: Using **Wi-Fi** will drain the battery faster.

Enable Wi-Fi Notifications

Touch **Network notification** to notify you when an open network is available for Wi-Fi use.

Add a Network

If your device does not automatically detect a network, you can add it manually.

1. Touch **Add Wi-Fi network**.
2. Enter the Network SSID.
3. Select the security level.
4. Touch **Save** to add it to your network list.

Connect to an Open Network

With Wi-Fi enabled, you can connect to an open network that has no security.

1. At the Wi-Fi network list, select an open network.
2. Your device should automatically connect. No password is needed for an open network.

Connect to a Secure Network

With Wi-Fi enabled, you can connect to a secure network.

1. At the Wi-Fi network list, select a secure network.
2. Enter the applicable security key. This is normally a WPA or WEP key.
3. Touch **Connect** to connect.

Note: The next time you connect to a secure network, you will not be prompted for the security key.

Scan for Networks

1. At the Wi-Fi network list, press the **Menu** key.
2. Touch **Scan** to refresh your network list.

Access Advanced Options

You can modify the Wi-Fi options on your device. These options are recommended for users experienced with configuring network connections.

1. At the Wi-Fi network list, press the **Menu** key.
2. Select **Advanced**.
3. Modify the advanced options as needed.

Bluetooth settings

From **Bluetooth settings**, you can modify the following features.

Enable Bluetooth

Bluetooth technology allows devices to wirelessly exchange information over a short distance of up to 32 feet (9.8 meters).

Before you can connect your device with another Bluetooth device, you need to enable the Bluetooth feature on your device.

Touch **Bluetooth** to activate Bluetooth. A check mark indicates Bluetooth is active. Your device automatically scans for available devices. Once the scan is complete, a list of available devices is shown.

Note: Using **Bluetooth** will drain the battery faster.

Pair with a Device

To enable your device to communicate with a Bluetooth device, you need to "pair" the device with your device. The following instructions describe the process. You may also need to reference the user guide provided with your Bluetooth device.

1. Prepare the Bluetooth device (accessory) for pairing as described in the device's user guide.
2. Touch **Scan for devices**. Your device then searches and detects any available Bluetooth device in the vicinity. The Bluetooth feature on your device must be enabled to find devices.
3. At the device list, touch and hold the device. If prompted, accept the pairing.
4. If necessary, enter the password provided with the Bluetooth device.
5. Touch **OK** to save pairing.

To unpair a device, select the device. Press the **Menu** key and select **Unpair** or **Disconnect & unpair** (if connected).

Note: Once a Bluetooth device has been paired, the devices will not prompt for password entry again.

Connect to a Device

Before you can use Bluetooth, you must get your device ready to communicate with another device. This is called "connecting". Some devices will attempt to automatically

connect to your device when the Bluetooth feature is turned on. To connect manually, do the following:

1. At the device list, touch and hold a paired device.
2. Press the **Menu** key, touch **Pair & connect**. You can now use the device with your device.

To disconnect from a Bluetooth device, touch **Disconnect**.

Note: When Bluetooth hands-free headsets or car kits are connected to your device, the Bluetooth connection icon appears on the status bar. When a second headset is paired, the first headset is automatically disconnected.

Set Device's Name

You can change the name your device has on a Bluetooth network.

1. Touch **Device name**.
2. Edit the name of your device.
3. Touch **OK** to save the name.

Allow Visibility

Touch **Discoverable** to allow your device to be visible to other Bluetooth devices for a limited time, usually about 120 seconds. A check mark indicates **Discoverable** is enabled.

Mobile networks

From **Mobile networks**, you can modify the following features.

Enable Data Connection

Touch **Data enabled** to allow connections to data services. A check mark indicates **Data enabled** is enabled.

Set Data Roaming

1. Touch **Data roaming**.
2. Select one of the following:
 - **Home only** does not allow roaming data calls.
 - **Automatic** allows roaming data calls.

Enable Domestic Voice Calls

Touch **Domestic voice** to receive roaming domestic voice calls. A check mark indicates **Domestic voice** is enabled.

If necessary, select **Yes** to acknowledge additional charges may apply to receive these calls.

Enable Domestic Data Calls

Touch **Domestic data** to receive roaming domestic data calls. A check mark indicates **Domestic data** is enabled.

If necessary, select **Yes** to acknowledge additional charges may apply to receive these calls.

Enable International Voice Calls

Touch **International voice** to receive roaming international voice calls. A check mark indicates **International voice** is enabled.

If necessary, select **Yes** to acknowledge additional charges may apply to receive these calls.

Enable International Data Calls

Touch **International data** to receive roaming international data calls. A check mark indicates **International data** is enabled.

If necessary, select **Yes** to acknowledge additional charges may apply to receive these calls.

Enable Roaming Guards

You can prevent your device from making calls while roaming. For example, to prevent your device from making an international call while roaming, do the following:

1. Touch **Roaming guards**.
2. Touch **International**.
3. Touch **Voice** to disable international voice calls while roaming.

If necessary, you can enable other roaming guards.

Call settings

From **Call settings**, you can modify the following features.

Set Voicemail Service

1. Touch **Voicemail service**.
2. Select your preferred voicemail service provider.

Set Voicemail Number

1. Touch **Voicemail settings**.
2. Touch **Voicemail number**.
3. Enter the voicemail number or touch **Call icon** to set a contact as your voicemail number.
4. Touch **OK** to save.

Enable North American Dialing

Touch **North American dialing** to enforce North American dialing standards as needed for outgoing calls. A check mark indicates **North American dialing** is enabled.

Set International Dialing Code

You can configure an international dialing code for outgoing calls.

1. Touch **International dialing**.
2. Enter the country code.
3. Touch **OK** to save the code.

Connect to TTY Device

You can connect the device to a teletype (TTY) device (sold separately) for the hearing impaired.

Note: Enable TTY only when using the device with a TTY device.

1. Connect the **TTY** device to your device.
2. Touch **TTY mode**.
3. If necessary, touch **OK** to clear the notification.
4. Select one of the following:
 - **TTY Off** disables TTY devices.
 - **TTY Full** enables TTY devices.
 - **TTY HCO** enables TTY devices and hearing carry over.
 - **TTY VCO** enables TTY devices and voice carry over.

Enable Voice Privacy

Touch **Voice Privacy** to use enhanced digital CDMA privacy. A check mark indicates **Voice Privacy** is enabled.

Set DTMF Tones

Touch **DTMF Tones** to set how long the dual-tone multi-frequency (DTMF) tones last when you dial a number.

Accounts

From **Accounts**, you can modify the following features.

Add an Account

Your device can receive calls from an Internet-based phone account, when you are using Wi-Fi. To add an account, do the following:

1. Touch **Add Account**.
2. Enter the information for your account, such as user name, password and server.
3. When done, press the **Back** key.

Receive Incoming Calls via Internet

Touch **Receive incoming calls** to receive all incoming calls with your Internet-based account. A check mark indicates **Receive incoming calls** is enabled.

Set Internet Calling

Your device can make and receive phone calls using an Internet-based account.

1. Touch **Use Internet calling**.
2. Select one of the following:
 - **For all calls** to use your account for all phone calls.
 - **Only for Internet calls** to use your account only with other Internet-based phone calls.
 - **Ask for each call** to be prompted about using your account for each call.

Sound

From **Sound**, you can modify the following features.

Enable Silent Mode

Touch **Silent mode** to silence all sounds except media and alarm sounds. A check mark indicates **Silent mode** is enabled.

Set Vibrate Alert

1. Touch **Vibrate**.
2. Select one of the following:
 - **Always** enables vibrate for all calls and alerts.
 - **Never** disables vibrate for all calls and alerts.
 - **Only in Silent mode** enables vibrate when **Silent mode** is enabled.
 - **Only when not in Silent mode** enables vibrate when **Silent mode** is disabled.

Set Volume

1. Touch **Volume**.
2. Use the slider controls to adjust each one of your volume settings as needed.
3. Touch **OK** to save.

Note: To use the incoming call volume setting for notification touch the check box.

Set Device Ringtone

1. Touch **Phone ringtone**.
2. Select a sound from the list. Touch the names to preview a sound.
3. Touch **OK** to save.

Set Notification Ringtone

1. Touch **Notification ringtone**.
2. Select a sound from the list. Touch the names to preview a sound.
3. Touch **OK** to save.

Enable Audible Touch Tones

Touch **Audible touch tones** to play tones when using the dial pad. A check mark indicates **Audible touch tones** is enabled.

Enable Screen Selection Sound

Touch **Audible selection** to play a sound when a screen is selected. A check mark indicates **Audible selection** is enabled.

Enable Screen Lock Sound

Touch **Screen lock sounds** to play a sound when locking or unlocking a screen. A check mark indicates **Screen lock sounds** is enabled.

Enable Haptic Feedback

Touch **Haptic feedback** to feel vibrations when pressing the screen in certain interactions. A check mark indicates **Haptic feedback** is enabled.

Connect to Hearing Aid Device

1. Connect the T-coil hearing aid device (sold separately) to your device.
2. Touch **Hearing aid** to use the hearing aid device. A check mark indicates **Hearing aid** is enabled.

Set Emergency Alert

You can set your device behavior when an emergency call is placed.

1. Touch **Emergency tone**.
2. Select an alert type from the list.

Display

From **Display**, you can modify the following features.

Set Brightness

1. Touch **Brightness**.
2. Use the slider controls to adjust the brightness.
3. Touch **OK** to save.

Note: To automatically adjust the brightness touch the check box.

Enable Auto-Rotate

Touch **Auto-rotate screen** to automatically switch orientation when the screen is rotated ninety degrees. A check mark indicates **Auto-rotate screen** is enabled.

Set Animation Level

You can set how many window animations your device may show.

1. Touch **Animation**.
2. Select the level of window animations to show.

Set Screen Timeout

You can set the idle time before the screen automatically turns off.

1. Touch **Screen timeout**.
2. Select a time.

Set Keyboard Timeout

You can set the idle time before the keyboard automatically turns off.

1. Touch **Keyboard timeout**.
2. Select a time.

Enable Notification Blink

Touch **Notification blink** to have the device's LED blink when you receive notifications. A check mark indicates **Notification blink** is enabled.

Location & security

From **Location & security**, you can modify the following features.

Enable Location for Networks

Touch **Use wireless networks** to allow applications using wireless networks (such as

Maps) to view your device's location. A check mark indicates **Use wireless networks** is enabled.

Enable Location for GPS

Touch **Use GPS satellites** to allow GPS satellites to view your device's location. A check mark indicates **Use GPS satellites** is enabled.

Enable Assisted GPS

Touch **Use assisted GPS** to allow network servers to assist GPS satellites to view your device's location. A check mark indicates **Use assisted GPS** is enabled.

Set Screen Lock

You can protect your device from unauthorized use with a pattern, password or other type of lock.

1. Touch **Set up screen lock**.
2. Select the type of screen lock you wish to create.
3. Follow the instructions to create the screen lock.

Note: To disable or modify your current screen lock, touch **Change screen lock**.

Enable Visible Passwords

Touch **Visible passwords** to show passwords as you type them. A check mark indicates **Visible passwords** is enabled.

Set Device Administrators

You can modify whether an application is a device administrator for your device.

1. Touch **Select device administrators**.
2. Select an application to remove or add as a device administrator.

Enable Secure Credentials

Touch **Use secure credentials** to allow applications to access secure certificates and other credentials. A check mark indicates **Use secure credentials** is enabled.

Install Encrypted Certificates

Touch **Install from SD card** to install encrypted certificates from your SD memory card.

Set Password for Credential Storage

1. Touch **Set password**.
2. Enter the new password.
3. Re-type the new password.
4. Touch **OK** to save.

Clear Credential Storage

Touch **Clear storage** to clear credential storage of all content and reset the password.

PC connection

From **PC connection**, you can modify the following features.

Set USB Connection

Your can set how your device reacts when a USB cable is connected to it.

1. Touch **Default connection type**.
2. Select one of the following:
 - **Charge only** only charges the device and does not allow data transmission.
 - **Mass storage** allows the device to be recognized as an external hard drive.
 - **Tethered mode** allows the device to connect a computer to the Internet.

Enable USB Connection Check

Touch **Ask me** to set the your device's USB connection type every time you connect a USB cable. A check mark indicates **Ask me** is enabled.

Applications

From **Applications**, you can modify the following features.

Allow Unknown Applications

1. Touch **Unknown sources**.
2. Read the message and touch **OK** to allow the installation of non-Market applications on your device.

A check mark indicates **Unknown sources** is enabled.

Set Keyboard Shortcuts

You can assign keyboard shortcuts to quickly launch applications.

1. Touch **Quick launch**.
2. Touch a letter or number.
3. At the application list, select a shortcut to assign it.

When using the keyboard, touch the **Search** key and the designated letter or number simultaneously to launch an application.

Manage Applications

You can manage the applications that are installed on your device.

1. Touch **Manage applications**.
2. At the applications list, select an application to manage.

To sort the applications, touch **Downloaded**, **All**, **On SD card**, or **Running**.

View Running Services

Touch **Running services** to view the status of services that are currently running. You can stop services, if necessary.

View Storage Use

Touch **Storage use** to view the memory being used by applications on your device.

View Battery Use

Touch **Battery use** to view the battery power being used by applications on your device.

Development

From **Development**, you can modify the following features.

Enable USB Debugging

Touch **USB debugging** to allow data to be copied between installed applications and other devices without notification when a USB is connected. A check mark indicates **USB debugging** is enabled.

Enable Stay Awake

Touch **Stay awake** to keep the screen awake when the device is charging. A check mark indicates **Stay awake** is enabled.

Enable Mock Locations

Touch **Mock locations** to allow your device to have fake locations. A check mark indicates **Mock locations** is enabled.

Accounts & sync

From **Accounts & sync**, you can modify the following features.

Enable Background Data

Touch **Background data** to allow applications to synchronize data at any time. A check mark indicates **Background data** is enabled.

Enable Auto-sync

Touch **Auto-sync** to allow applications to synchronize data automatically. A check mark indicates **Auto-sync** is enabled.

Add an Account

You can synchronize your device with your accounts, such as Google.

1. Touch **Add account**.
2. Select an application or account type.
3. Complete the settings as needed. You may need the applicable user name and password for the account.

Modify an Account

You can add, remove, or modify the accounts synchronized with your device.

1. At the accounts list, select an account.
2. Modify the account as needed.

Create a Google Account

You can create a Google account from your device.

1. Touch **Add account**.
2. Select the Google application.
3. Touch **Next** and follow the prompts to create a user name and password. You will also need to accept the Google Terms of Service.
4. Once your account is created, select the Google applications you wish to synchronize with your device.

Privacy

From **Privacy**, you can modify the following features.

Enable Data Backup

Touch **Back up my data** to backup your settings and other application data. A check mark indicates **Back up my data** is enabled.

Enable Auto Restore

Touch **Automatic restore** to automatically restore backed up settings and data, if an application you have removed is reinstalled. A check mark indicates **Automatic restore** is enabled.

Reset Device to Factory Status

You can reset your device to its initial factory state. This will erase all data and downloaded applications. You will not be able to recover any data.

1. Touch **Factory data reset**.
2. Read the message and touch **Reset Phone**.

Storage

From **Storage**, you can modify the following features.

Unmount SD Card

Touch **Unmount SD card** to unmount the SD card for safe removal from your device. To remount the SD card, touch **Mount SD card**.

Warning: Always unmount your SD card before removing it from your device. Otherwise, data may be lost or damaged.

Erase SD Card

You can format the SD card in your device. This will erase all the data on the SD card. You will not be able to recover any data.

1. Touch **Erase SD card**.
2. Read the message and touch **Erase SD card**.
3. Touch **Erase everything** to begin formatting.

Language & keyboard

From **Language & keyboard**, you can modify the following features.

Set Language

1. Touch **Select language**.
2. Select a language from the list.

User dictionary

From **User dictionary**, you can modify the content of the built-in dictionary.

Add Words to Dictionary

1. From **User dictionary**, press the **Menu** key.
2. Touch **Add**.
3. Enter the word.
4. Touch **OK** to add it to your dictionary.

Edit Words in Dictionary

1. At the word list, touch a word.
2. Touch **Edit**.
3. Edit the word as needed.
4. Touch **OK** to save.

Delete Words from Dictionary

1. At the word list, touch a word.
2. Touch **Delete**.

Enable Swype

Touch **Swype** to use Swype entry for the touch screen keyboard. A check mark indicates **Swype** is enabled.

Swype

From **Swype**, you can modify the following features.

Set Language

1. Touch **Language**.
2. Select a language from the list.

Enable Word Prediction

Touch **Word prediction** to display word suggestions as you type. A check mark indicates **Word prediction** is enabled.

When you are typing, touch suggested words to select them.

Enable Audio Feedback

Touch **Audio feedback** to hear a sound when a key is touched. A check mark indicates **Audio feedback** is enabled.

Enable Vibration

Touch **Vibrate on keypress** to feel a vibration when a key is touched. A check mark indicates **Vibrate on keypress** is enabled.

Show Quick Help Tips

Touch **Enable tip indicator** to turn on a flashing indicator for helpful tips. A check mark indicates **Enable tip indicator** is enabled.

Enable Auto-spacing

Touch **Auto-spacing** to automatically insert spaces between words. A check mark indicates **Auto-spacing** is enabled.

Enable Auto-capitalization

Touch **Auto-capitalization** to automatically capitalize words as needed when you enter them. A check mark indicates **Auto-capitalization** is enabled.

Show Trace

Touch **Show complete trace** to display the complete Swype path as you use the touch screen. A check mark indicates **Show complete trace** is enabled.

Show Word Choices

1. Touch **Word choice window**.
2. Use the slider control to select a level. This will be set when the word choice window appears.

Set Swype Response

1. Touch **Speed vs. accuracy**.
2. Use the slider control to select a level. A faster response will react more quickly to your touch, but may be less accurate. Adjust to your preference.

Show Help

Touch **Swype help** to view the help information for Swype.

Play Tutorial

Touch **Tutorial** to play a tutorial for Swype.

Enable Android Keyboard

Touch **Android keyboard** to use Android entry for the touch screen keyboard. A check mark indicates **Android keyboard** is enabled.

Android keyboard

From **Android keyboard**, you can modify the following features.

Enable Vibration

Touch **Vibrate on keypress** to feel a vibration when a key is touched. A check mark indicates **Vibrate on keypress** is enabled.

Enable Sound

Touch **Sound on keypress** to hear a sound when a key is touched. A check mark indicates **Sound on keypress** is enabled.

Enable Popups

Touch **Popup on keypress** to see a popup when a key is touched. A check mark indicates **Popup on keypress** is enabled.

Enable Word Correction

Touch **Touch to correct words** to correct entered words when you select them. A check mark indicates **Touch to correct words** is enabled.

Enable Auto-capitalization

Touch **Auto-capitalization** to automatically capitalize words as needed when you enter them. A check mark indicates **Auto-capitalization** is enabled.

Display Settings Key

You can display an icon to access settings on your Android keyboard.

1. Touch **Show settings key**.
2. Select one of the following:
 - **Automatic** displays icon when needed.
 - **Always show** always displays icon.
 - **Always hide** never displays icon.

Display Voice Icon

You can display an icon to access voice commands on your Android keyboard.

1. Touch **Voice input**.
2. Select one of the following:
 - **On main keyboard** displays icon on the letters keyboard.
 - **On symbols keyboard** displays icon on the symbols keyboard.
 - **Off** never displays icon.

Set Input Languages

You can switch languages when you are using the Android keyboard. You must set the languages that you wish to use.

1. Touch **Input languages**.
2. Select the languages you want to use. A check mark indicates a language is enabled.

To switch languages when using the Android keyboard, slide your finger on the **Space** key.

Enable Word Suggestions

Touch **Show suggestions** to display word suggestions from the dictionary as you type. A check mark indicates **Show suggestions** is enabled.

When you are typing, touch suggested words to select them.

Enable Auto-complete

Touch **Auto-complete** to enter a highlighted word automatically if a space or punctuation is typed. A check mark indicates **Auto-complete** is enabled.

Show suggestions must be enabled to use **Auto-complete**.

Built-in keyboard

From **Built-in keyboard**, you can modify the following features.

Enable Auto-replace

Touch **Auto-replace** to automatically correct words that are incorrectly type. A check mark indicates **Auto-replace** is enabled.

Enable Auto-capitalization

Touch **Auto-cap** to automatically capitalize words as needed when you enter them. A check mark indicates **Auto-cap** is enabled.

Enable Auto-punctuate

Touch **Auto-punctuate** to automatically insert periods when you press the **Space** key twice. A check mark indicates **Auto-punctuate** is enabled.

Voice input & output

From **Voice input & output**, you can modify the following features.

Voice recognizer settings

From **Voice recognizer settings**, you can modify the following features.

Set Language

You can set the language you use for voice commands.

1. Touch **Language**.
2. Touch the language you want to use.

Set Filter

1. Touch **SafeSearch**.
2. Touch a filter level. This will filter the results of voice searches.

Block Offensive Words

Touch **Block offensive words** to hide offensive words from voice search results. A check mark indicates **Block offensive words** is enabled.

Text-to-speech settings

From **Text-to-speech settings**, you can modify the following features.

Play Demo

Touch **Listen to an example** to play a short demonstration of how speech synthesis works.

Use Default Settings

Touch **Always use my settings** to always override an application's settings with the default settings. A check mark indicates **Always use my settings** is enabled.

Set Search Engine

You can set the search engine used for spoken text.

1. Touch **Default Engine**.
2. Touch the engine you want to use.

Install Voice Data

Touch **Install voice data** to install the voice data package required to run text-to-speech synthesis from the **Market**.

Set Speech Rate

1. Touch **Speech rate**.
2. Select a rate from the list. This is how fast the text is spoken.

Set Language

You can set the language-specific voice used for spoken text.

1. Touch **Language**.
2. Touch the language you want to use.

Install Languages

You can install different language-specific voices used for spoken text.

1. Touch **Pico TTS**.
2. Touch a supported language to install the data package from the **Market**.

Accessibility

From **Accessibility**, you can modify the following features.

Enable Accessibility

Touch **Accessibility** to enable the features provided by applications that support accessibility. A check mark appears when **Accessibility** is enabled. You may need to configure each application's accessibility features separately.

To disable accessibility, touch **Accessibility**.

Modify Accessibility Options

From **Accessibility** you can modify options for applications that support accessibility. When you download an application with an accessibility feature, it is listed here. Touch an application name to configure it.

End Calls with Power Key

Touch **Power button ends call** to end calls by pressing the **Power** key. A check mark indicates **Power button ends call** is enabled.

Date & time

From **Date & time**, you can modify the following features.

Use Network Date and Time

Touch **Automatic** to use the date and time values provided by the network. A check mark indicates **Automatic** is enabled.

Set Date Manually

When you choose not to use the date provided by the network you can set it manually.

1. Touch **Set date**.
2. Use the controls to enter a date.
3. Touch **Set** to save.

Set Time Zone Manually

When you choose not to use the time zone provided by the network you can set it manually.

1. Touch **Select time zone**.
2. Select a time zone from the list.

Set Time Manually

When you choose not to use the time provided by the network you can set it manually.

1. Touch **Set time**.
2. Use the controls to enter a time.
3. Touch **Set** to save.

Enable 24-hour Time

Touch **Use 24-hour format** to display the time in a 24-hour format. A check mark indicates **Use 24-hour format** is enabled.

Set Date Format

1. Touch **Select date format**.
2. Select a date format from the list.

About phone

From **About phone**, you can modify the following features.

System updates

From **System updates**, you can modify the following features.

Note: If you have trouble connecting to the update servers, open a Wi-Fi connection and attempt to connect to the update servers again. For more information about Wi-Fi connections, see “Wi-Fi settings” on page 56.

Check Profile Updates

Touch **Update profile** to check for updates to your voice and data settings. If needed, follow the prompts to complete the update.

Check Firmware Updates

Touch **Update firmware** to check for firmware updates. If needed, follow the prompts to complete the update.

Check Software Updates

Touch **Update Kyocera software** to check for software updates. If needed, follow the prompts to complete the update.

View Device Status

Touch **Status** to view the current phone number, battery power and other information regarding the status of your device.

View Battery Use

Touch **Battery use** to view how the battery power is being used by your device.

View Legal Information

Touch **Legal information** to view the legal information related to the Android operating system.

Play System Tutorials

Touch **System tutorial** to view tutorials about features of the Android operating system.

10 Other Android Applications

Your device has several Android applications preloaded. They are mentioned in this section briefly. For more detailed instructions on Google-specific applications, go to the Google web site, www.google.com/mobile.

Launch Books

Books is an eBooks service provided by Google. It lets you browse and read books online. Your device must be synchronized with a valid Google account to use this feature.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Books**.
3. At the books list, you can do one of the following:
 - Touch a book to read it.
 - Touch and hold a book to access features for that specific book.
 - Press the **Menu** key to access more features.

Browser

Use **Browser** to surf the web with your device.

Launch Browser

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Browser**.

3. At the browser screen, you can do one of the following:
 - Scroll up or down to explore the current page.
 - Enter a query in the address file. Touch a suggestion or touch **Go** to surf to the Web page.
 - Touch a link on the Web page to go to it.
 - Press the **Menu** key to access more features.

Add a Bookmark

1. From the home screen, touch **Main Menu icon**.
 2. At the main menu, touch **Browser**.
 3. Go to the Web page you wish to bookmark.
 4. At the Web page, press the **Menu** key.
 5. Touch **Add bookmark**.
 6. Edit the bookmark information as needed.
 7. Touch **OK** to save.
- To access your bookmarks, touch **Bookmarks**.

Use Calculator

Use **Calculator** to perform basic and advanced mathematical operations.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Calculator**.

3. At the keypad, you can do one of the following:
 - Use the keypad to perform calculations.
 - Press the **Menu** key to access more features.
 - Press the **Back** key to exit.

Calendar

Use **Calendar** to schedule appointments. The **Calendar** is synchronized with your web-based Google calendar when you sync your device using a Google account.

Launch Calendar

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Calendar**.
3. At the calendar screen, you can do one of the following:
 - Scroll up or down to change months.
 - Touch a date to view a date in detail.
 - Touch and hold a date to access features for that specific date.
 - Press the **Menu** key to access more features.

Create an Event

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Calendar**.
3. At the calendar screen, touch and hold a date.

4. Touch **New event**.
5. At the edit event screen, enter event details as necessary.
6. Touch **Save** to create the event.

Clock

Use **Clock** to keep time and set alarms.

Set an Alarm

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Clock**.
3. At the clock screen, press the **Menu** key.
4. Touch **Alarms**.
5. At the alarms screen, you can do one of the following:
 - Touch **Add alarm** to create a new alarm.
 - Touch an icon next to an alarm to activate it. Touch icon again to deactivate it.
 - Touch an alarm to modify it.
 - Touch and hold an alarm to access features for the specific alarm.
 - Press the **Menu** key to access more features.

Add an Alarm

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Clock**.
3. At the clock screen, press the **Menu** key.

4. Touch **Add alarm**.
5. Use the controls to enter a time.
6. Touch **Set** to enter the time.
7. Configure the alarm as needed.
8. Touch **Done** to save the alarm.

Market

Use **Market** to download and install new applications.

Note: Some applications may require purchase. Please check with your service provider.

Download an Application

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Market**.
Note: If you are opening **Market** for the first time, you will see a terms of service notification. Touch **Accept** to continue.
3. At the market screen, shop for a new application. If necessary, touch **Search icon** to find applications.
4. Touch the application you wish to download.
5. At the application detail screen, touch [**Amount**] to buy the application. If the application is free, touch **Free**.
6. Touch **OK** to accept the required permissions and begin the download.

7. When the download is complete an icon appears on your notifications bar.
8. When you see the downloads icon, touch the icon and drag it down to open the notifications list.
9. Touch the downloads notification to open the application.

Manage Applications

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Market**.
3. At the market screen, press the **Menu** key.
4. Touch **My Apps**.
5. At the applications list, you can do the following.
 - Touch **Update all** to install all outstanding updates, if needed.
 - Touch an application to view it and install an update, if needed.
 - Touch and hold an application to access features for the specific application.
 - Press the **Menu** key to access more features.

Gmail

Gmail is a web-based email service provided by Google. A **Gmail** application comes preconfigured on your device. **Gmail** is synchronized with your web-based Gmail when you sync your device using a Google account.

View Gmail

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Gmail**.
3. At the Gmail screen, you can do one of the following:
 - Touch an email thread to open the thread.
 - Touch and hold an email thread to access features for that specific thread.
 - Press the **Menu** key to access more features.

Note: To select multiple email threads, touch the check box next to the threads. Touch the check box again to deselect. Options that apply to multiple email threads appear at the bottom of the screen.

Create an Email

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Gmail**.
3. At the Gmail screen, press the **Menu** key.
4. Touch **Compose**.
5. At the compose screen, enter a recipient's email address.
6. Enter a subject. Touch and hold the text entry field to access more text entry features.
7. Enter a message. Touch and hold the text entry field to access more text entry features.
8. If applicable, press the **Menu** key to access more Gmail features.
9. When done, touch **Send**.

Reply to an Email

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Gmail**.
3. At the Gmail screen, touch an email thread.
4. Scroll to bottom of any message and touch **Reply**.
5. Enter a message. Touch and hold the text entry field to access more text entry features.
6. If applicable, press the **Menu** key to access more Gmail features.
7. When done, touch **Send**.

Set Eco Mode

You can conserve the battery life while you use your device.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Eco Mode**.
3. At the Eco Mode screen, adjust the slider bar to one of the following:
 - **Always** to always use **Eco Mode** when your device is on.
 - **10-90%** to automatically switch your device to **Eco Mode** according to remaining battery power.
 - **Never** to disable **Eco Mode**.

Touch **Eco settings** to adjust your **Eco Mode** settings. Select the items you want to set. The leaf icon turns green when selected.

Email

Email allows you to access email accounts from service providers that support POP3, IMAP or Exchange.

Configure an Email Account

The first time you launch **Email**, you will be asked to configure an email account.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Email**.
3. At the email screen, enter the email address.
4. Enter the password.
5. Touch **Next** to continue. The device automatically retrieves your email settings.
6. Enter a nickname for your account, if needed.
7. Enter the name that is displayed on outgoing messages.
8. Touch **Done** to add the email account.

If you do not use a common email provider, you may need to manually configure your settings. Touch **Manual setup** to access the advanced options.

View an Email Account

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Email**.

3. At the accounts list, touch the account you want to view. If you only have one account, you will skip this step.
4. At the email screen, you can do one of the following:
 - Touch an email to view it.
 - Touch and hold an email to access features for that specific email.
 - Press the **Menu** key to access more features.

Note: To select multiple emails, touch the check box next to the emails. Touch the check box again to deselect. Options that apply to multiple emails appear at the bottom of the screen.

Create an Email

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Email**.
3. At the accounts list, touch the account you want to view. If you only have one account, you will skip this step.
4. At the email screen, press the **Menu** key.
5. Touch **Compose**.
6. At the compose screen, enter a recipient's email address.
7. Enter a subject. Touch and hold the text entry field to access more text entry features.

8. Enter a message. Touch and hold the text entry field to access more text entry features.
9. If applicable, press the **Menu** key to access more email features.
10. When done, touch **Send**.

Reply to an Email

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Email**.
3. At the email screen, touch an email thread.
4. At the accounts list, touch the account you want to view. If you only have one account, you will skip this step.
5. Scroll to bottom of email and touch **Reply**.
6. Enter a message. Touch and hold the text entry field to access more text entry features.
7. If applicable, press the **Menu** key to access more email features.
8. When done, touch **Send**.

Launch Latitude

Latitude allows you to view a friend's location and share your location with them on Google Maps. Your device must be synchronized with a valid Google account to use this feature.

Note: Your device's GPS must be enabled to use this feature. For more information, see "Enable Location for GPS" on page 63.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Latitude**.
3. At the Latitude screen, you can do one of the following:
 - Touch icon on top icon bar to add friends, refresh or check-in to location.
 - Press the **Menu** key to access more features.

Launch Places

Places allows you to find places that are near your current location.

Note: Your device's GPS must be enabled to use this feature. For more information, see "Enable Location for GPS" on page 63.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Places**.
3. At the Places screen, you can do one of the following:
 - Enter a place in the search field and touch **Search icon** to find places.
 - Touch a category to see a listing of places near your location.
 - Press the **Menu** key to access more features.

Launch Maps

Maps allows you to view a friend's location and share your location with them on Google Maps.

Note: Your device's GPS must be enabled to use this feature. For more information, see "Enable Location for GPS" on page 63.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Maps**.
3. At the Maps screen, you can do one of the following:
 - Enter a location in the search field and touch **Search icon** to find it.
 - Touch icon on top icon bar to launch **Places**, add layers or change perspective.
 - Use the controls to zoom in or out.
 - Press the **Menu** key to access more features.

Launch Navigation

Navigation is a Web-based GPS navigation service which allows you to get directions for destination by voice.

Note: Your device's GPS must be enabled to use this feature. For more information, see "Enable Location for GPS" on page 63.

1. From the home screen, touch **Main Menu icon**.

2. At the main menu, touch **Navigation**.
3. At the Navigation screen, enter a destination and follow the voice prompts.

Launch News & Weather

News & Weather allows you to read the latest headline, sports, entertainment and weather news in your location.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **News & Weather**.
3. At the News screen, you can do one of the following:
 - Scroll left or right to view stories under a different topic.
 - Touch a story to view the story in detail.
 - Press the **Menu** key to access more features.

Google Search

Google Search allows you to search for information on your device and on the Web.

Do a Word Search

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Google Search**.

3. At the search screen, enter a query in the search field. You can do one of the following.
 - As you type the query, touch a suggested result from your device’s searchable items to view it. For example, a contact or music.
 - As you type the query, touch a suggestion to conduct a Web search.
 - Touch **Go** to conduct a Web search on the query exactly as you typed it.
 - Press the **Menu** key to access more features.

To do a search at any time, press the **Search** key on your device.

Do a Voice Search

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Voice Search**.
3. Follow the prompts to complete your search.

To do a voice search from the **Google Search** search, touch **Voice Search icon** on the icon bar at top of screen.

Launch Talk

Talk is an instant messaging program provided by Google. It lets you chat with other people that also have a Google account. Your device

must be synchronized with a valid Google account to use this feature.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Talk**.
3. At the friends list, you can do one of the following:
 - Touch friend to initiate a new chat or continue a current chat.
 - Touch and hold an friend to access features for that specific friend.
 - Press the **Menu** key to access more features.

Launch YouTube

YouTube is an online video streaming service that allows you to view videos uploaded by YouTube members.

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **YouTube**. If this is your first time using **YouTube**, you need to accept the terms of service.
3. At the videos list, you can do one of the following:
 - Touch a video to play it.
 - Touch icon on top icon bar to record a new video or search for videos.
 - Press the **Menu** key to access more features.

11 Voice Dialer

Use **Voice Dialer** to execute certain commands through voice recognition.

Launch Voice Dialer

1. From the home screen, touch **Main Menu icon**.
2. At the main menu, touch **Voice Dialer**.
3. When prompted to speak, say a command from the displayed list on the screen. When the application recognizes the command, it executes the command immediately.

Voice Dialer Options

Call a Contact

1. Activate **Voice Dialer**.
2. When prompted to speak, say **Call [contact]**. For example, to call John Smith's mobile phone, say "Call John Smith Mobile". Your device will automatically call the contact.
If the application cannot recognize the name or number, it displays several possible matches. Say or touch **Yes** or **No**.
3. Complete the phone call.

Dial a Number

1. Activate **Voice Dialer**.
2. When prompted to speak, say **Dial [number]**. For example, to dial 800-555-1234, say "Dial 8005551234". Your device will automatically dial the number.
If the application cannot recognize the name or number, it displays several possible matches. Say or touch **Yes** or **No**.
3. Complete the phone call.

Launch an Application

1. Activate **Voice Dialer**.
2. When prompted to speak, say **Open [application]**. For example, to open **Calculator**, say "Open Calculator".
3. Use the application.
Note: If you do not specify an application after the command **Open**, the screen displays a list of applications, then waits for you to say an application name.

Phone Help

From the main menu, select **Phone Help** to access help information for your device. You can find a complete user guide at www.kyocera-wireless.com/support.

Customer Support

Your service provider's customer support department may be accessible directly from your device when you dial a number, such as *611 (check with your service provider). They can answer questions about your device, phone bill, call coverage area, and specific features available to you, such as call forwarding or voicemail. For questions about the device features, refer to the materials provided with your device, or visit www.kyocera-wireless.com.

For additional questions, you may contact the Kyocera Communications Inc. Customer Care Center in any of the following ways:

- Web site: www.kyocera-wireless.com.
- Email: phone-help@kyocera-wireless.com.
- Phone (U. S. and Canada): 1-800-349-4478 or 1-858-882-2000 (press 2 for Product Information).

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider.
- The actual error message or problem you are experiencing.
- The steps you took to reproduce the problem.
- The device's mobile equipment identifier (MEID).

Note: From **About phone**, select **Status**. Scroll down to **MEID (dec)**. The 18-digit number is the MEID number. If your device uses an electronic service number (ESN), **ESN** replaces **MEID**.

Qualified Service

If the problem with your device persists, return the device with all accessories and packaging to the dealer for qualified service.

Consumer Limited Warranty

Kyocera Communications Inc. (“KYOCERA”) offers you a limited warranty that the enclosed product or products (the “Product”) will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from an authorized supplier. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. KYOCERA shall, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by KYOCERA to be defective in material or workmanship, or if KYOCERA determines that it is unable to repair or replace such Product, KYOCERA shall refund the purchase price for such Product, provided that the subject Product (i) is returned, with transportation prepaid, to a KYOCERA authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period (“Proof of Purchase”). After the one year warranty period, you must pay all shipping, parts and labor charges.

This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by KYOCERA), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage the result of fire, flood, acts of God or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling, shipping and blown fuses; (ix) consumable (such as fuses); or (x) any Product which has been opened, repaired, modified or altered by anyone other than KYOCERA or a KYOCERA authorized service center. KYOCERA MAKES NO REPRESENTATION OR WARRANTY WITH REGARD TO ACCESSORIES OTHER THAN THOSE ORIGINALLY

PACKAGED WITH THE DEVICE. PLEASE CHECK WITH THE MANUFACTURER OF ANY THIRD PARTY ACCESSORIES AS TO COMPATIBILITY AND SAFETY.

KYOCERA SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS".

KYOCERA MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR

VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR. A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE.

NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For warranty service information, please call the following telephone number from anywhere in the continental United States and Canada:

1-800-349-4478 or 858-882-1401.

Kyocera Communications Inc. ("Kyocera") End User License Agreement

CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS ("AGREEMENT") BEFORE USING OR OTHERWISE ACCESSING THE SOFTWARE OR SERVICES PROVIDED WITH YOUR KYOCERA DEVICE. THE SOFTWARE AND SERVICES PROVIDED WITH YOUR KYOCERA DEVICE ARE SOLELY FOR PERSONAL USE BY YOU, THE ORIGINAL END USER, AS SET FORTH BELOW.

BY ACTIVATING, USING, DOWNLOADING OR INSTALLING THIS KYOCERA DEVICE AND/OR THE SOFTWARE PROVIDED WITH IT, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE, DOWNLOAD OR OTHERWISE ACCESS THE SOFTWARE OR SERVICES AND (I) PROMPTLY RETURN THE SOFTWARE OR SERVICE TO KYOCERA OR DELETE IT; OR (II) IF YOU HAVE PURCHASED THE KYOCERA DEVICE ON WHICH THE SOFTWARE OR SERVICE IS PRE-INSTALLED, PROMPTLY RETURN THE DEVICE AND THE ACCOMPANYING SOFTWARE (INCLUDING DOCUMENTATION AND PACKAGING) TO KYOCERA OR THE KYOCERA

AUTHORIZED DISTRIBUTOR FROM WHICH YOU PURCHASED THE KYOCERA DEVICE.

License: Subject to the terms and conditions of this Agreement and any other terms that may be incorporated by reference or otherwise presented to you prior to your use of the Software, Kyocera grants you a limited, non-exclusive, license to use Kyocera and third party proprietary software and services found on your Kyocera device and/or packaged with your Kyocera device, including any updates to such material by whatever means provided, and any related documentation ("Software"). You may use the Software only as expressly authorized by this Agreement.

Limitations: This Software is licensed for use only on the single Kyocera device you originally purchased. You acknowledge and agree that ownership of the Software and all other rights associated with the Software not expressly granted in this Agreement are retained by Kyocera or its suppliers or licensors. You are not permitted to, in any way, distribute the Software or make it available over a network for use on more than the single Kyocera device for which it was originally supplied. The Software may be copied only as permitted by applicable law and as necessary for backup purposes. You may not remove any proprietary notices or labels on the Software or any copies thereof. You may not in any way,

modify, reverse engineer, decompile, disassemble or create derivative works based on the Software (except to the extent that this restriction is expressly prohibited by law). You agree that you will not attempt to circumvent, disable or modify any security technology associated with the Software. You may use the Software only in a manner that complies with all applicable laws in the jurisdictions in which you use it, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights and/or the export control regulations.

Some of the Software packaged with your Kyocera device may be provided by third parties ("Third Party Software"). Third Party Software may also be available from third party content distributors such as application stores. Third Party content may be subject to different or additional terms and conditions as determined by the Third Party Software provider. **THIRD PARTY SOFTWARE IS NOT A KYOCERA PRODUCT. KYOCERA IS NOT RESPONSIBLE FOR AND HAS NO LIABILITY WITH REGARD TO THIRD PARTY SOFTWARE.**

Open Source Software: The Software contains certain open source software which may be subject to the GNU General Public License ("GPL"), GNU Library/Lesser General Public License ("LGPL") and/or other copyright licenses, disclaimers and notices (Open Source License Terms"). The applicable Open Source License Terms for the corresponding Open Source Software are reproduced and available at

<http://www.opensource.org/licenses>. Please refer to the Open Source License Terms regarding your rights under such licenses to the Open Source Software. To the extent any such agreement requires that Kyocera provide you the rights to copy, modify, distribute or otherwise use any Open Source Software that are inconsistent with the limited rights granted to you in this Agreement, then such rights in the applicable Open Source License shall take precedence over the rights and restrictions granted in this Agreement, but solely with respect to such Open Source Software.

Disclaimer of Warranty and Liability: THE SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND. KYOCERA FURTHER DISCLAIMS ALL WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, TITLE, ACCURACY, CORRESPONDENCE WITH DESCRIPTION AND SATISFACTORY QUALITY. TO THE MAXIMUM EXTENT PERMISSIBLE BY LAW, THE ENTIRE RISK ARISING OUT OF THE USE OR PERFORMANCE OF THE SOFTWARE REMAINS WITH YOU. IN NO EVENT WILL KYOCERA, ITS EMPLOYEES, OFFICERS, SHAREHOLDERS, LICENSORS, SUPPLIERS, CARRIER OR DISTRIBUTOR CUSTOMERS OR AFFILIATES BE HELD LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER

(INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF THIS AGREEMENT OR THE USE OF OR INABILITY TO USE THE SOFTWARE, WHETHER BASED IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR ANY OTHER THEORY, EVEN IF KYOCERA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF ANY LIMITED REMEDY IS DEEMED TO HAVE FAILED ITS ESSENTIAL PURPOSE. KYOCERA'S TOTAL LIABILITY FOR ANY DAMAGES UNDER THIS AGREEMENT SHALL NEVER EXCEED THE PURCHASE PRICE YOU PAID FOR THE KYOCERA DEVICE.

No software is fault free. The Software is designed for use in systems that do not require fail-safe performance. You may not use the software in any device or system in which a malfunction of the software would result in foreseeable risk of loss, injury or death to any person. This includes operation of nuclear or infrastructure facilities, medical equipment, aircraft navigation or communication systems or use in risky or dangerous situations or environments.

Consent to Use of Data: You agree that Kyocera, its affiliates and its designated agents may collect and use technical and related information, gathered in any manner, as part of its product support services. Kyocera, its affiliates and designated agents may use this

information solely to improve its products or to provide customized services or technologies to you. Kyocera will collect and use this information in accordance with its privacy policy and accordance with applicable data protection laws. Kyocera, its affiliates and designated agents may disclose this information to others, but not in a form that personally identifies you.

Modification of Software and Terms of Use: Kyocera reserves the right to from time to time modify any portion of the Software. Kyocera may be required to take these actions due to restrictions from third party licensors or due to safety or security concerns or government restrictions or court orders.

Kyocera reserves the right to modify the terms of this Agreement at its sole discretion. Any such modification will be effective upon Kyocera or a Kyocera affiliate or agent sending notice to you by email, text message, other electronic communication or postal mail. Your continued use of the Software after such notice will constitute your binding acceptance of the Agreement as revised. Additionally, some Software may be subject to different or additional terms presented to you through a separate click-through or other type of agreement or notice prior to your use of such Software.

Termination: This License Agreement will automatically terminate without notice from or action by Kyocera if you fail to comply with any term hereof.

Governing Law: This Agreement is governed by the laws of State of California except any

conflict of law provisions. The U.N. Convention on Contracts for the International Sales of Goods is hereby excluded in its entirety from this Agreement.

Severability: If any provision of this Agreement is found to be invalid, illegal or unenforceable, the validity, legality or enforceability of the remaining provisions will not in any way be impacted or impaired.

Entire Agreement: By using or otherwise accessing the Software, you agree that this Agreement sets forth the entire agreement between you and Kyocera with regard to the Software and supersedes all prior agreements, notwithstanding the terms of any such agreements.

Index

A

- accounts
 - adding, 33, 65
 - auto-sync, 65
 - background data, 65
 - creating, 17, 65
 - editing, 65
- airplane mode, 23, 56
- alerts
 - emergency, 62
- Android keyboard
 - auto-capitalization, 68
 - auto-complete, 69
 - correcting, 68
 - popups, 68
 - settings key, 68
 - sound, 68
 - vibration, 68
 - voice icon, 69
 - word suggestions, 69
- animation
 - set, 62
- applications
 - battery, 64
 - development, 65
 - downloading, 75
 - manage, 64
 - managing, 75
 - shortcuts, 64
 - storage, 64
 - unknown, 64
- audible selection, 61
- audible touch tones, 61

B

- back key, 24
- battery
 - charging, 9
 - conserve, 76
 - drain, 10
 - installing, 9
 - recharging, 9
 - safety guidelines, 10
- Bluetooth, 57
 - adding devices, 57
 - connecting devices, 58
 - pairing, 57
 - phone name, 58
 - visibility, 58
- brightness
 - set, 62
- browser, 26, 73
 - bookmarks, 73
 - launching, 73
- built-in keyboard
 - auto-capitalization, 69
 - auto-punctuate, 69
 - auto-replace, 69

C

- calculator, 73
- calendar, 74
 - creating events, 74
 - viewing, 74
- call history, 26
- call log, 30
 - calling, 30
 - deleting, 31

- erasing, 31
- saving numbers, 31
- texting, 31
- viewing, 31
- calls
 - answering, 28
 - Bluetooth, 29
 - conference, 29
 - dialer, 27
 - dialpad, 29
 - DTMF tones, 60
 - emergency, 28
 - ending, 28
 - hard pause, 28
 - history, 30
 - ignoring, 28
 - international dialing, 59
 - making, 27
 - missed, 30
 - mute, 29
 - North American dialing, 59
 - phone, 27
 - power key, 71
 - saving numbers, 27
 - speakerphone, 29
 - switch, 29
 - time pause, 27
 - TTY device, 60
 - voice privacy, 60
 - volume, 28
- camcorder
 - changing modes, 53
 - color effect, 53
 - default settings, 53
 - last video, 53
 - quality, 53
 - recording videos, 51
 - white balance, 53
- camera, 51
 - auto exposure, 52, 53
 - changing modes, 51
 - color effect, 52
 - default settings, 52
 - focus mode, 52
 - last picture, 51
 - night mode, 52
 - picture size, 52
 - quality, 52
 - store location, 51
 - taking pictures, 51
 - white balance, 52
 - zoom, 52
- clock, 74
 - creating alarms, 74
 - setting alarms, 74
- consumer limited warranty, 83, 85
- contacts
 - adding accounts, 33
 - calling, 27, 32, 34
 - creating, 32
 - deleting, 35
 - display options, 33
 - editing, 33, 34
 - erasing, 33
 - exporting, 34
 - favorites, 33, 34
 - image, 35
 - importing, 34
 - messaging, 34
 - number labels, 34
 - ringtone, 35
 - searching, 33
 - send to voicemail, 35
 - sharing, 34, 35

- sorting, 33
- texting, 32
- viewing, 32
- viewing all, 32

conventions, using this guide, 21

customer support, 82

D

date

- format, 72
- network, 71
- setting, 71

development

- mock locations, 65
- stay awake, 65
- USB debugging, 65

device

- keys, 23

downloads, 75

E

email

- configuring, 77
- creating, 77
- replying, 78
- viewing, 77

emergency calls, 28

F

favorites, 32

- calling, 27

folders, 25

G

gallery, 45

- assigning files, 46
- cropping files, 46
- deleting files, 46
- details, 46

- playing files, 45
- rotating files, 46
- sharing files, 46
- slideshow, 45
- taking pictures, 45
- viewing all, 45
- viewing files, 45

Gmail

- creating, 76
- replying, 76
- viewing, 76

Google applications, 73

Google Books, 73

Google Maps, 79

Google Talk, 80

H

haptic feedback, 61

hearing aid, 62

help, getting, 82

home key, 24

home screen, 24

- applications, 25
- deleting items, 26
- notifications, 25
- overview, 22
- recent applications, 26
- repositioning items, 26
- searching, 24, 26
- settings, 26
- viewing, 23

I

icons, 18, 19

input languages, 69

Internet calling, 60

- accounts, 60

Internet calls

- incoming, 60
 - K
 - keyboard
 - Android, 68
 - Swype, 67
 - timeout, 62
 - L
 - Latitude, 78
 - location
 - gps, 63
 - wireless network, 62
 - M
 - main menu, 26
 - memory card
 - installing, 12
 - removing, 11
 - menu key, 24
 - menus
 - main, 15
 - settings, 54
 - messages
 - adding contact, 40, 41
 - adding subject, 37, 41
 - attaching file, 37, 41
 - attachments, 42
 - auto-retrieve, 44
 - callback number, 44
 - calling sender, 41
 - CMAS, 43
 - contacts, 37
 - copying, 42
 - creating, 36, 40
 - deleting, 40, 43
 - deleting old, 43
 - drafts, 38, 43
 - erasing, 38
 - forwarding, 42
 - inserting smiley, 38, 41
 - locking, 42
 - notifications, 44
 - priority, 38, 43
 - read reports, 44
 - receiving, 37, 48, 75
 - replying, 40
 - ringtone, 44
 - roam auto-retrieve, 44
 - searching, 40
 - slideshow, 38, 41
 - thread limits, 43
 - vibrate, 44
 - view all, 36
 - viewing, 40
 - viewing contact, 41
 - viewing details, 42
 - viewing sender, 40
 - mobile data, 58
 - roaming, 58
 - multimedia, 45, 47, 51
 - music, 47, 51
 - albums, 47
 - artists, 47
 - deleting albums, 49
 - deleting artists, 50
 - deleting songs, 49
 - file repeat, 50
 - file shuffle, 48, 50
 - party shuffle, 48
 - playing albums, 49
 - playing all, 48
 - playing artists, 49
 - playing playlists, 49
 - playing songs, 47, 50
-

- playlist, 49
- playlists, 47, 49, 50
- ringtones, 49
- searching, 48

N

- Navigation, 79
- navigation shortcuts, 13
- news, 79
- notifications
 - LED, 62
- number
 - calling, 27
- numbers
 - redialing, 27

P

- phone
 - answering calls, 28
 - battery, 72
 - icons, 18, 19
 - legal information, 72
 - making calls, 27
 - overview, 13, 14
 - service, 82
 - status, 72
 - tutorials, 72
- phone help, 82
- Places, 78
- playlists
 - adding songs, 49
 - deleting, 49
- power key
 - turning off, 23
 - turning on, 23
- privacy
 - auto restore, 66
 - data backup, 66

- factory reset, 66

R

- ringtones
 - message, 44
 - notifications, 61
 - phone, 61
- roaming
 - domestic, 58
 - guards, 59
 - international, 59
- running services, 64

S

- screen
 - auto-rotate, 62
 - timeout, 62
- screen lock
 - setting, 63
- screen sounds
 - locking, 61
 - selecting, 61
- SD card
 - formatting, 66
 - unmounting, 66
- search, 79
 - voice, 80
 - word, 79
- security
 - certificates, 63
 - device administrators, 63
 - secure credentials, 63
 - visible passwords, 63
- security credential
 - password, 63
- security credentials
 - clear, 63
- settings

- accessibility, 71
 - accounts, 65
 - Android keyboard, 68
 - applications, 64
 - Bluetooth, 57
 - built-in keyboard, 69
 - call, 59
 - date, 71
 - display, 62
 - Internet calling, 60
 - keyboard, 66
 - language, 66
 - location, 62
 - messaging, 43
 - mobile network, 58
 - network, 56, 57
 - phone information, 72
 - privacy, 66
 - security, 62
 - sound, 61
 - storage, 66
 - Swype, 67
 - system updates, 72
 - text-to-speech, 70
 - USB, 64
 - voice, 70
 - voice recognition, 70
 - Wi-Fi, 56
 - wireless, 56
 - shortcuts, 24
 - silent mode, 24, 61
 - songs
 - loading, 48
 - support, customer, 82
 - Swype
 - auto-capitalization, 67
 - auto-spacing, 67
 - fast response, 68
 - help, 67, 68
 - language, 67
 - show trace, 67
 - sound, 67
 - tutorial, 68
 - vibration, 67
 - word choice, 68
 - word suggestions, 67
- T
- T-coil hearing aid, 62
 - teletype device, 60
 - text entry
 - Android keyboard, 38
 - built-in keyboard, 38
 - copying, 39
 - deleting, 39
 - dictionary, 39
 - input method, 40
 - letter case, 39
 - numbers, 39
 - pasting, 39
 - smileys, 39
 - text-to-speech
 - default settings, 70
 - example, 70
 - language, 70
 - language data, 71
 - search engine, 70
 - speech rate, 70
 - voice data, 70
 - threads, messages, 36
 - time
 - 24-hour format, 72
 - network, 71
 - setting, 71
-

- zones, 71
- touch screen
 - locking, 24

U

- updates
 - firmware, 72
 - profile, 72
 - software, 72
- USB
 - connections, 64
- user dictionary, 66
 - adding, 66
 - deleting, 67
 - editing, 67

V

- vibrate alert
 - set, 61
- voice commands, 29
- voice dialer, 81
 - launching applications, 81
 - making calls, 81
- voice recognition
 - block offensive, 70
 - filtering, 70
 - language, 70
- voicemail
 - configuring, 29
 - receiving, 30
 - set number, 59
 - set service, 59
- volume
 - set, 61
- volume key, 24

W

- wallpapers, 25

- warranty, 83, 85
- weather, 79
- widgets, 25
- Wi-Fi, 56
 - adding networks, 56
 - connecting, 56
 - notifications, 56
 - open networks, 56
 - scanning, 57
 - secure networks, 56
 - settings, 57

Y

- YouTube, 80

