


# revol wireless voice mail user guide

## how to setup your voice mail

1. From your revol phone – dial \*86  
or  
From another phone or landline – dial your revol phone number. When you hear the greeting, press zero (0).
2. Select your voice mail language – 1 for English, 2 for Spanish.
3. When the recording asks for a temporary password, enter the last 4 digits of your revol phone number.
4. Follow along as the recording will walk you through setting up your greeting and new password.

## voice mail navigation

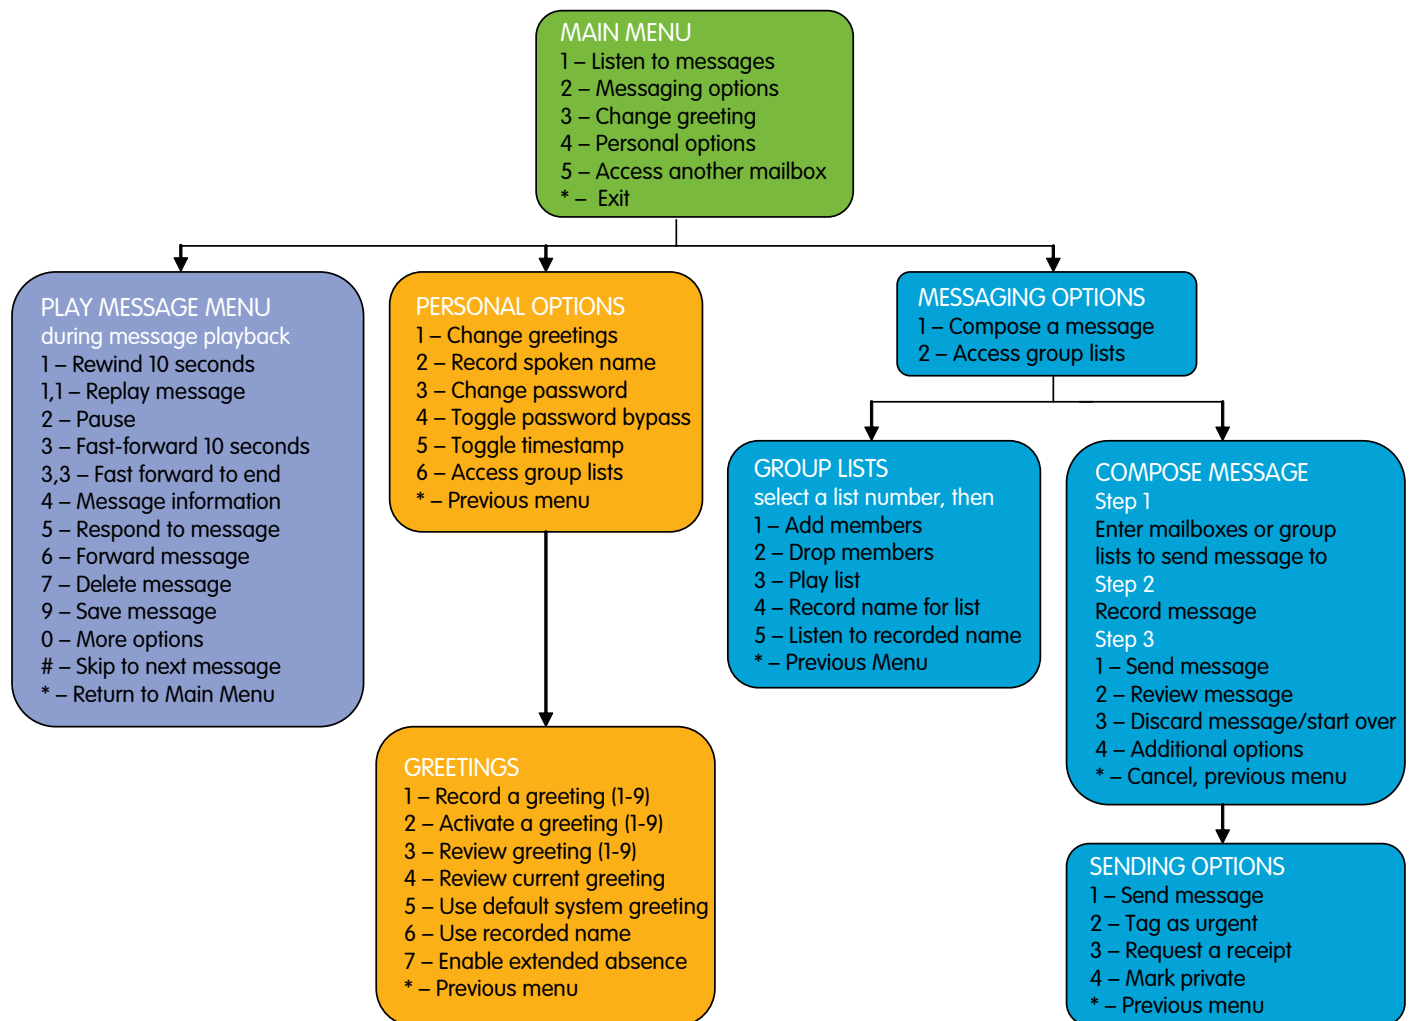

PLEASE NOTE: All new and saved voice mail messages will automatically delete after 60 days.